

# FLAT RATE REPAIR PARTS LIST

PART NUMBERS	DESCRIPTION
622-5222-102	ADF RECEIVER
622-2855-011	RADIO ALTIMETER
921005	AIRSHOW 420
622-9851-001	COMM/NAV TUNING UNIT
622-5046-101	ELECTRONIC DISPLAY UNIT
622-8000-006	ELECTRONIC FLIGHT INSTRUMENT PROCESSOR
622-9436-101	ELECTRONIC FLIGHT INSTRUMENT PROCESSOR
622-4591-512	FLIGHT CONTROL COMPUTER
822-1152-121	GLOBAL LANDING UNIT
822-0330-001	HF RECEIVER TRANSMITTER
622-4717-003	MODE CONTROL PANEL
622-4717-004	MODE CONTROL PANEL
RV700-1117-001	MARK VII PROJECTOR
RV700-1117-009	MARK VII PROJECTOR
622-5001-109	RADIO DISTANCE MAGNETIC INDICATOR
622-8849-100	RADIO FREQUENCY UNIT
622-7878-201	MODE S TRANSPONDER
622-7878-301	MODE S TRANSPONDER
822-0336-001	MODE S TRANSPONDER
622-8973-001	TCAS RADIATING ELEMENT
743-0238-001	TRI AUDIO VIDEO TAPE PLAYER
622-8971-022	TCAS TRANSMITTER/RCVR
622-6831-002	VHF FREQUENCY PANEL
622-7292-101	VHF COMM. TRANSCEIVER
622-5219-020	RECEIVER TRANSMITTER
822-1250-002	DATA TRANSCEIVER
RV700-1590-001	14.0IN. VIDEO MONITOR
RV700-1589-002	16.0IN. VIDEO MONITOR
622-5132-109	WXR RCVR/XMTR
622-5132-633	WXR RCVR/XMTR
1320A0000-01	Trim Air Valve
957B0000-01	Control Valve
962A0000-07	Trim Air Pressure Valve
963B0000-01	Trim Air Valve
964A0000-05	Flow Control Valve
974B0000-01	Plenum
1111A0000-01	Solenoid Valve
1386C0000-01	Spoiler Servo Control
926C0000-01	Actuator
MZ4306000-12	Spoiler Servo Control
2290B020000	I.P. Check Valve
2293B020000	I.P. Check Valve
388D010000	Control Thermostat
398B050000	Control Thermostat
398E020000	Control Thermostat
6730F010000	Fan Air Valve
6742D010000	Over Pressure Valve
6753B040000	High Pressure Valve

6753D010000	High Pressure Valve
6754C030000	Press. Regulating Valve
6763D090000	High Pressure Bleed Valve
6764B040000	Press. Regulating Valve
S4-3300346-02	Cargo Door Jack
1263A0000-03	Air Cycle Machine
1298A0000-01	Check Valve
1303A0000-04	Flow Control Valve
1312B0000-01	Bypass Valve
1320A0000-01	Trim Air Valve
1803B0000-02	Air Conditioning Controller
1806B0000-02	Flow Control Valve
1814A0000-02	Air Cycle Machine
2056C0000-01	Plenum
746A0000-06	Trim Air Pressure Valve
747C0000-01	Water Extractor
748A0000-08	Anti-Icing Valve
749A0000-02	Plenum
751A0000-07	Flow Control Valve
751B0000-02	Flow Control Valve
751F0000-01	Flow Control Valve
751G0000-02	Flow Control Valve
757C0000-02	Air Cycle Machine
758A0000-02	Bypass Valve
759D0000-02	Pack Temp. Controller
766A0000-01	Temperature Sensor
767A0000-04	Temperature Sensor
963B0000-01	Trim Air Valve
B17CA1042	Cargo Valve
1111A0000-01	Solenoid Valve
780B0000-01	Command Sensor Unit
787A0000-07	Valve Block
810A0000-06	Rudder Servo Control
829C0000-01	Slat Actuator
830C0000-01	Slat Actuator
831C0000-01	Wing Tip Brake
9028A0006-03	Flap Position Transducer
S4-3400920-02	2/2 Way Valve
1905A0000-01	Safety Valve
2290B020000	I.P. Check Valve
2293B020000	I.P. Check Valve
341E030000	Solenoid Thermostat
342B040000	Control Thermostat
6713D080000	High Pressure Valve
6714D070000	Press. Regulating Valve
6740B050000	Over Pressure Valve
6740E010000	Over Pressure Valve
6773E010000	High Pressure Valve
6774E010000	Press. Regulating Valve
6774G010000	Press. Regulating Valve
S4-3300520	Actuator
S4-3400900	Manual Selector Valve

5803	DETECTOR BOARD CSBV
36720	PITOT PROBE
45000	TOTAL PRESSURE PROBE
49380	PITOT PROBE
50520	PITOT PROBE
16990568	ANGLE OF ATTACK SENSOR
20662155	DU-FULL COLOR DISPLAY UNIT FCD55
20662155	DU-FULL COLOR DISPLAY UNIT FCD55
20667325	VHV FCD 55
20667465	EQUIPPED STRUCTURE FCD 55
20667498	EQUIPPED STRUCTURE FCD55
20667820	DEFLECTION BOARD FCD55
20778345	EFCU INTERCO
20778503	EFCU INTERCO
39060966	VHV FCD 66
39061295	POWER SUPPLY BOARD FCD 66
39061342	ANALOG BOARD FCD 66
39061364	INTERCONNECTION BOARD
39380334	INTERCONNECTION ASSY
39380336	VHV FCD 66 MKII
39381936	VHV OHU
39451205	CAN BOARD ELAC
39451207	MAN BOARD ELAC
39451250	CPU BOARD EIU
39579296	POWER SUPPLY BOARD EIU
39952130	DISCRETE BOARD EIU
39953057	ANALOG BOARD EIU
39953077	CPS BOARD ELAC
39953078	MPS BOARD ELAC
45112022	POWER SUPPLY BOARD PHC
45112026	DISCRETE I/O BOARD PHC
45112027	FRONT FACE PHC
45112028	PC BOARD
45150320	ANGLE OF ATTACK SENSOR
45150340	ANGLE OF ATTACK SENSOR
45150560	ANGLE OF ATTACK SENSOR
45150561	ANGLE OF ATTACK SENSOR
45150563	ANGLE OF ATTACK SENSOR
45383461	AC PROBE CONTROL BOARD PHC
45606002	DU-FULL COLOR DISPLAY UNIT FCD66 MKII
45606002	DU-FULL COLOR DISPLAY UNIT FCD66 MKII
45606111	DU-FULL COLOR DISPLAY UNIT FCD66 MKII
45606111	DU-FULL COLOR DISPLAY UNIT FCD66 MKII
45606112	DU-FULL COLOR DISPLAY UNIT FCD66 MKII
45606112	DU-FULL COLOR DISPLAY UNIT FCD66 MKII
46010960	ANALOG BOARD FCD 66 MKII
46010961	POWER SUPPLY BOARD FCD 66 MKII
46010964	ANALOG BOARD FCD 66 MKII
46013273	DIGITAL BOARD FCD 66 MKII
46077740	OHU-OPTICAL HEAD UNIT
46079021	ANALOG BOARD FCD 66
46084028	ANALOG BOARD FCD 66

46084029	ANALOG BOARD FCD 66
89138704	MOTHER BOARD ELAC
1663214200	PROBE HEAT COMPUTER
1663214200	PROBE HEAT COMPUTER
1663214301	PROBE HEAT COMPUTER
1663214301	PROBE HEAT COMPUTER
1663214401	PROBE HEAT COMPUTER
1663214401	PROBE HEAT COMPUTER
3905300101	ELECTRICAL FLIGHT CONTROL UNIT
3905300102	ELECTRICAL FLIGHT CONTROL UNIT
3905302101	ELECTRICAL FLIGHT CONTROL UNIT
3905302102	ELECTRICAL FLIGHT CONTROL UNIT
3906130302	DU-FULL COLOR DISPLAY UNIT FCD66
3906130302	DU-FULL COLOR DISPLAY UNIT FCD66
3906130402	DU-FULL COLOR DISPLAY UNIT FCD66
3906130402	DU-FULL COLOR DISPLAY UNIT FCD66
3906134302	SYMBOL GENERATOR FCD 66
3907130302	DU-FULL COLOR DISPLAY UNIT FCD66
3907130302	DU-FULL COLOR DISPLAY UNIT FCD66
3907130402	DU-FULL COLOR DISPLAY UNIT FCD66
3907130402	DU-FULL COLOR DISPLAY UNIT FCD66
3921004705	COMMAND BOARD EFCU
3921004705	COMMAND BOARD EFCU
3921004905	MONITORING BOARD EFCU
3921004905	MONITORING BOARD EFCU
3921005001	COMMAND BOARD EFCU
3921005001	COMMAND BOARD EFCU
3921005002	COMMAND BOARD EFCU
3921005002	COMMAND BOARD EFCU
3921005101	MONITORING BOARD EFCU
3921005101	MONITORING BOARD EFCU
3945121210	CPU BOARD ELAC
3945121212	CPU BOARD ELAC
3945121213	CPU BOARD ELAC
3945121214	CPU BOARD ELAC
3945121410	MPU BOARD ELAC
3945121413	MPU BOARD ELAC
3945121414	MPU BOARD ELAC
3945121516	MPU BOARD ELAC
3945122502	ELEVATOR AND AILERON COMPUTER
3945122504	ELEVATOR AND AILERON COMPUTER
3945122505	ELEVATOR AND AILERON COMPUTER
3945122506	ELEVATOR AND AILERON COMPUTER
3945122608	ELEVATOR AND AILERON COMPUTER
3945123505	ELEVATOR AND AILERON COMPUTER
3945123506	ELEVATOR AND AILERON COMPUTER
3945123608	ELEVATOR AND AILERON COMPUTER
3945125012	CPU BOARD EIU
3945125103	CPU BOARD EIU
3945125104	CPU BOARD EIU
3945128102	ELEVATOR AND AILERON COMPUTER
3945128103	ELEVATOR AND AILERON COMPUTER

3945128205	ELEVATOR AND AILERON COMPUTER
3945128206	ELEVATOR AND AILERON COMPUTER
3945128207	ELEVATOR AND AILERON COMPUTER
3945128208	ELEVATOR AND AILERON COMPUTER
3945128209	ELEVATOR AND AILERON COMPUTER
3951289012	CPU BOARD
3957900612	ENGINE INTERFACE UNIT
3957960001	PARAVISUAL INDICATOR (PVI)
3957985114	ENGINE INTERFACE UNIT
3957985115	ENGINE INTERFACE UNIT
3957985205	ENGINE INTERFACE UNIT
3995100208	SPC-STALL PROTECTION COMPUTER
3995227506	CDG BOARD ELAC
3995227507	CDG BOARD ELAC
3995227509	CDG BOARD ELAC
3995227510	CDG BOARD ELAC
3995227607	MDG BOARD ELAC
3995227609	MDG BOARD ELAC
3995227610	MDG BOARD ELAC
3995227611	MDG BOARD ELAC
4511202308	CPU BOARD PHC
4511202309	CPU BOARD PHC
351116025571	MELANGEUR
351116804721	HYPERFREQUENCY SOURCE
351116804722	HYPERFREQUENCY SOURCE
351118080091	AMPLI DISCRI
351118092003	HYPERFREQUENCY SOURCE
351118092861	BOARD
351118092881	PLO5 BOARD
351118147401	BOARD
351118157153	BOARD
351118159651	PLO5 BOARD
959960711505	BTE800
959960711509	RTP810
959960711511	RTP815
959960711512	SIMULATOR SIM-815
959960711519	RTP800
959960711524	RTP810S
959960712301	LRRR ANTENNA AHV5-401
959960712303	LRRR ANTENNA AHV5-501-1
959960712326	LRRR ANTENNA ANT-133-2
959960712333	LRRR ANTENNA ANT-140
959960712337	LRRR ANTENNA AHV5-501-A1
959960712338	LRRR ANTENNA AHV5-401A
959960712349	LRRR ANTENNA AHV5-501-2
959960712352	LRRR ANTENNA ANT-140A
959960714101	LRRR INDICATOR IND-521
959960714108	LRRR INDICATOR IND-521
959960714112	LRRR INDICATOR IND-521
959960714145	LRRR INDICATOR IND-521
959960714168	LRRR INDICATOR IND-521
959960714504	LRRR TRANSCEIVER ERT-011





959960714939	LRRR TRANSCEIVER ERT-530
959960714939	LRRR TRANSCEIVER ERT-530
959960714939	LRRR TRANSCEIVER ERT-530
959960714939	LRRR TRANSCEIVER ERT-530
959960714940	LRRR TRANSCEIVER ERT-530
959960714940	LRRR TRANSCEIVER ERT-530
959960714940	LRRR TRANSCEIVER ERT-530
959960714940	LRRR TRANSCEIVER ERT-530
959960714940	LRRR TRANSCEIVER ERT-530
959960714941	LRRR TRANSCEIVER ERT-530
959960714941	LRRR TRANSCEIVER ERT-530
959960714941	LRRR TRANSCEIVER ERT-530
959960714941	LRRR TRANSCEIVER ERT-530
959960714942	LRRR TRANSCEIVER ERT-530
959960714942	LRRR TRANSCEIVER ERT-530
959960714942	LRRR TRANSCEIVER ERT-530
959960714942	LRRR TRANSCEIVER ERT-530
959960715102	LRRR INDICATOR IND-231A
959960715103	LRRR INDICATOR IND-231A
959960715105	LRRR INDICATOR IND-231A
959960715106	LRRR INDICATOR IND-231A
959960715107	LRRR INDICATOR IND-231A
959960715108	LRRR INDICATOR IND-231A
959960715901	SIMULATOR SIM-530
959960715902	SIMULATOR SIM-530
959960717553	LRRR INDICATOR IND-521
959960717554	LRRR INDICATOR IND-521
959960718501	LRRR TRANSCEIVER ERT-160
959960718501	LRRR INDICATOR IND-231A
959960718501	LRRR TRANSCEIVER ERT-160
959960718501	LRRR TRANSCEIVER ERT-160
959960719501	LRRR TRANSCEIVER ERT-540
959960719501	LRRR TRANSCEIVER ERT-540
959960719501	LRRR TRANSCEIVER ERT-540
959960719501	LRRR TRANSCEIVER ERT-540
959960719501	LRRR TRANSCEIVER ERT-540
959960719502	LRRR TRANSCEIVER ERT-540
959960719502	LRRR TRANSCEIVER ERT-540
959960719502	LRRR TRANSCEIVER ERT-540
959960719502	LRRR TRANSCEIVER ERT-540
959960719502	LRRR TRANSCEIVER ERT-540
959960719503	LRRR TRANSCEIVER ERT-540
959960719503	LRRR TRANSCEIVER ERT-540
959960719503	LRRR TRANSCEIVER ERT-540
959960719991	LRRR TRANSCEIVER ERT-550
959960719991	LRRR TRANSCEIVER ERT-550
959960719991	LRRR TRANSCEIVER ERT-550
959960719991	LRRR TRANSCEIVER ERT-550
959960719992	LRRR TRANSCEIVER ERT-550
959960719992	LRRR TRANSCEIVER ERT-550
959960719992	LRRR TRANSCEIVER ERT-550
959960719992	LRRR TRANSCEIVER ERT-550
959960719992	LRRR TRANSCEIVER ERT-550
959960719993	LRRR TRANSCEIVER ERT-550
959960719993	LRRR TRANSCEIVER ERT-550



959960719993	LRRR TRANSCEIVER ERT-550
959960719993	LRRR TRANSCEIVER ERT-550
959960719994	ARA - ANALOGIC RADIO ALTI
030-00101-0002	CONNECTOR (FOR COPILOT CONNEXION)
032-00145-0000	ANTENNA SWITCH
047-50357-0003	ADAPTER KIT ANTENNA TCAS
050-01846-0001	COUPLER UNIT INSTAL KIT HF
050-01847-0009	COUPLER/PA INSTALL KIT (#2) HF COM
050-01848-0001	INSTALL KIT HF COM
050-01989-0000	BRIDGING AMP INSTALL KIT
050-01991-0001	EXTERNAL CAPACITOR INSTALL KIT
050-01992-0001	DUAL CAPACITOR INSTALL KIT
050-02398-0000	DME CONNECTOR KIT
050-02546-0005	INSTALL KIT MLS
050-02979-0000	INSTALLATION KIT NAV ATC
050-03078-0010	INSTALL KIT PROCESSOR TCAS
050-03088-0000	INSTALLATION KIT WXR
050-03365-0000	INSTALLATION KIT NAV/RA
050-03497-0000	INST KIT (INCLUD CONFIG MO)
064-01015-0001	RECEIVER EXITER HF COM
064-01016-0003	HF CONTROL UNIT COM
064-01017-0002	COUPLER/PA
066-01101-0060	RECEIVER NAV VHF
066-01105-0010	RECEIVER NAV ADF
066-01107-0021	TRANSCEIVER NAV DME
066-01143-1602	RECEIVER NAV ATC
066-01143-2101	RECEIVER NAV ATC
066-01146-0201	TCAS PROCESSOR
066-01153-0101	RADIO ALTIMETER
066-01160-2502	FMS SYSTEM
071-00019-0000	BRIDGE AMPLIFIER HF
071-00090-0000	MOUNTING TRAY MLS
071-00097-0100	WR Radar Config module
071-01270-0001	DUAL EXTERNAL CAPACITOR HF COM.
071-01271-0001	EXTERNAL CAPACITOR HF COM
071-01348-0020	NAV ADF ANTENNA
071-01357-0000	MOUNTING RACK KIT NAV DME
071-01362-0009	RECEIVER MLS
071-01438-0202	RADAR CONTROL PANEL WX
071-01459-0000	ANTENNA MLS
071-01501-0000	NAV RA ANTENNA
071-01519-0101	RADAR WX
071-01548-0100	DIRECTIONAL ANTENNA
071-01549-0200	WX ANTENNA
071-04047-0000	MOUNTING TRAY
10-105-31A-N-2D	VHF ANTENNA
10-203-32-H-2D	ANTENNA ATC/DME WITH GASKET
10-204-6-T-2D	ANTENNA GLIDE/SLOPE WITH GASKET
10-208-15-B-2D	ANTENNA MARKER WITH GASKET
10-250-9-B-2D	ANTENNA VOR/LOC WITH GASKET
103-00034	TEMPERATURE PROBE
103-1190	VHF STANDBY CONTROL PANEL

10-520-10	MARKER ANTENNA SPLITTER
10-520-8	VOR/LOC COUPLER
10-536-1	VOR/LOC SPLITTER
1-1307-AA	INDICATOR
121-017686-01	GPS ANTENNA
1327-82	ANTENNA ROD TYPE
1333-300-200	BSU Universal Antenna Mounting Angle
1333-300-201	BSU Universal Antenna Mounting Angle
1333-500-100	Diplexer Low Noise Amplifier (DLNA)
1333-500-200	Diplexer Low Noise Amplifier (DLNA)
1333-700-201	High Power Relay (HPR)
1374-100-000	EQAR-EXT. STORAGE QUICK ACCESS RECORDER
1374-100-000	EQAR-EXT. STORAGE QUICK ACCESS RECORDER
1374-100-002	EQAR-EXT. STORAGE QUICK ACCESS RECORDER
1374-100-002	EQAR-EXT. STORAGE QUICK ACCESS RECORDER
1374-100-003	EQAR-EXT. STORAGE QUICK ACCESS RECORDER
1374-100-003	EQAR-EXT. STORAGE QUICK ACCESS RECORDER
1374-102-000	EQAR-EXT. STORAGE QUICK ACCESS RECORDER
1374-102-000	EQAR-EXT. STORAGE QUICK ACCESS RECORDER
1374-102-100	EQAR-EXT. STORAGE QUICK ACCESS RECORDER
1374-102-100	EQAR-EXT. STORAGE QUICK ACCESS RECORDER
1374-102-110	EQAR-EXT. STORAGE QUICK ACCESS RECORDER
1374-102-110	EQAR-EXT. STORAGE QUICK ACCESS RECORDER
1374-120-000	I/O BOARD
1374-121-000	I/O BOARD
1374-122-000	I/O BOARD
1374-130-000	OPTICAL DRIVE KIT
1374-140-000	POWER SUPPLY UNIT
1374-140-001	POWER SUPPLY UNIT
1374-140-100	POWER SUPPLY UNIT
1374-150-000	SCSI BOARD
1374-155-000	PC BOARD
1374-156-000	PC BOARD
1374-160-000	EQUIPPED REAR PANEL
1374-161-000	EQUIPPED REAR PANEL
1374-162-000	EQUIPPED REAR PANEL
1374-165-000	FRONT PANEL BOARD
1374-170-000	KIT CABLE
1374-200-000	EQAR-EXT. STORAGE QUICK ACCESS RECORDER
1374-200-000	EQAR-EXT. STORAGE QUICK ACCESS RECORDER
1374-200-002	EQAR-EXT. STORAGE QUICK ACCESS RECORDER
1374-200-002	EQAR-EXT. STORAGE QUICK ACCESS RECORDER
1374-220-000	I/O BOARD
1374-255-000	PC BOARD
1374-260-000	EQUIPPED REAR PANEL
16052-0001	POWER DIVIDER MLS
2017-10	ELT BRACKET ASSEMBLY
2019-10	ELT REMOTE SWITCH KIT
2126-125-00-00	DC VOLTMETER
2126-215-00-00	AC VOLTMETER
2126-321-00-00	AMMETER
2136-113-8	DC VOLTMETER

2136-213-8	AC VOLTMETER
2136-313-8	DC AMMETER
2136-315-80-11	AMMETER
2136-423-8	AC CHARGE INDICATOR
2136-424-8	AC CHARGE INDICATOR
2136-713-8	FREQUENCYMETER 400HZ
2306-101-00-10	DC VOLTMETER
2306-201-00-10	AC VOLTMETER
2306-301-00-11	DC AMMETER
2306-401-00-10	AC AMMETER
2306-701-00-10	FREQUENCY METER
2393-014-0	INDICATEUR AMPEREMETRE CC
2396-118-0	VOLTMETRE COURANT CONTINU 0 - 30V
2396-323-0	AMPEREMETRE COURANT CONTINU
2396-328-00-00	DC AMP. INDICATOR
2426-120-8	DC AMP. INDICATOR
2426-220-8	AC AMP. INDICATOR
2426-523-8	ACM AIRFLOW INDICATOR
2426-525-8	ACM AIRFLOW INDICATOR
2426-701-8	FREQUENCY/CSD RPM INDICATOR
2426-702-8	FREQUENCY/CSD RPM INDICATOR
2794-901-00-11	POWER GENERATION DISPLAY PANEL
29-20001-055-00	PC BOARD
29-20001-055-01	PC BOARD
29-20001-057-15	BOARD
29-20001-057-25	PCB
29-20001-057-34	CPU BOARD
29-20001-057-35	CPU BOARD
29-20001-057-44	CPU BOARD
29-20001-057-50	CPU BOARD
29-20001-057-55	CPU BOARD
29-20001-057-61	CPU BOARD
29-20001-057-65	CPU BOARD
29-20001-059-03	CPU BOARD
29-20001-059-37	CPU BOARD
29-20001-059-38	CPU BOARD
29-20001-059-65	CPU BOARD
29-20001-059-66	CPU BOARD
29-20001-059-76	CPU BOARD
29-59005-050-05	POWER SUPPLY CARD
29-59005-052-04	I/O BOARD
29-59005-053-02	ARINC BOARD
29-59005-054-13	P.C. BOARD
29-59005-055-02	P.C. BOARD
29-59005-303-00	POWER SUPPLY RMP
29-59005-334-00	DISPLAY 6 DIGITS
2995-100-00-11	SHUNT
2995-250	SHUNT
2995-402-00-10	SHUNT (/battery)
3002-10	ELT COAXIAL CABLE ASSEMBLY
3194-1	STICK SHAKER
32-30	SERVOMOTOR

33135-3	CABIN DIFFERENTIAL PRESSURE IN
33140-3	CABIN VERTICAL SPEED INDICATOR
33790-22	TOTAL PRESSURE PROBE
3433-105-000A00	TOP MOUNTED INTERMEDIATE GAIN ANTENNA
3433-105-010A00	TOP MOUNTED INTERMEDIATE GAIN ANTENNA
3433-105-100A00	INTERMEDIATE GAIN ANTENNA (IGA)
3433-300-000A00	HLD-HIGH POWER AMPLIFIER
3433-300-002A00	JETSAT HIGH POWER LOW NOISE AMPLIFIER - HLD 115V
3433-300-010A02	HIGH POWER AMPLIFIER (HLD)
3433-500-000A00	SDU-SATELLITE DATA UNIT
3433-500-001A00	SDU-SATELLITE DATA UNIT
3433-500-002A00	SDU 115V - SATELLITE DATA UNIT
3433-500-010C00	SATELLITE DATA UNIT (SDU)
3433-500-010C01	SATCOM - SDU (version 2)
3433-500-011A00	SATCOM - SDU (version 2)
3433-500-011A01	SATCOM - SDU (version 2)
3433-500-110C01	SATCOM - SDU/MCTU (version 1)
3433-500-111A00	SATELLITE DATA UNIT (SDU/MCTU) (version 1)
35-0F5-1000	ANNUNCIATOR LIGHT TEST BOARD
35-0L5-1005-08	BATTERY CHARGE LIMITER
35-0L5-271	AQUISITION BOARD
35-0L5-360-08	CPU CARD
35-0L5-371	AQUISITION BOARD
35-0L5-471	AQUISITION BOARD
35-0L5-562	POWER SUPPLY
35-0L5-652	POWER SUPPLY
35-0L5-662	POWER SUPPLY
35-1H5-1001	BTMU-BRAKE TEMPERATURE MONITORING UNIT
35-1H5-1002	BTMU-BRAKE TEMPERATURE MONITORING UNIT
35-1H5-1002	BTMU-BRAKE TEMPERATURE MONITORING UNIT
35-1H6-1000	BTMU-BRAKE TEMPERATURE MONITORING UNIT
35-1H6-1001	BTMU-BRAKE TEMPERATURE MONITORING UNIT
35-1H6-1001	BTMU-BRAKE TEMPERATURE MONITORING UNIT
35-242-100	COMPENSATOR
35-245-100	FIRE EXTING. DICH. UNIT ELECTRONIC TEST MODULE
35-315-2002	JAMMING DETECTION CONTROL UNIT
35-315-2003	JAMMING DETECTION CONTROL UNIT
35-461-1000	AUTOLAND INDICATOR
35-467-2001	BRAKE TEMPERATURE DETECTION UNIT
35-493-2001	INDICATOR LIGHT DIMMER
35-493-2002	INDICATOR LIGHT DIMMER
35-835-1000	GROUND CALL FLASHER
35-840-1001	STATIC INVERTER CSM1205
35-905-150	JAMMING DETECTION CONTROL UNIT
35-910-1000	WINDOW HEAT PROTECTION UNIT
35-930-1001	RUDDER TRIM INDICATOR
35-940-151	CONTROL BOARD
35-940-152	CONTROL BOARD
35-940-2001-201	REPROGRAMMABLE ANNUNCIATOR LIGHT TEST UNIT
35-941-255	DETECTION BOARD
35-941-355	DETECTION BOARD
37000-3	CABIN ALTIMETER

37000-3-01	CABIN ALTIMETER
39-20V4	MINI GYRO
39-20V4	MINI GYRO
39-20V5	MINI GYRO
39-20V5	MINI GYRO
3C2200A	RCIM-ROLL CONTROL INPUT MODULE
3F2202A	FSCL-FLIGHT SPOILER CONTROL LEVER
3F2202A	FSCL-FLIGHT SPOILER CONTROL LEVER
3LO-881-5-5	IMPACT SWITCH FDR/CVR
4000-11	ELT-EMERGENCY LOCATOR TRANSMITTER
405-0383-001	MOUNTING TRAY GPWS
405-0424-003	MOUNTING TRAY
4126-152-80-12	INDICATOR
420-00332-501	AHRU-ATTITUDE & HEADING REFERENCE UNIT
420-00332-501	AHRU-ATTITUDE & HEADING REFERENCE UNIT
420-00332-501	AHRU-ATTITUDE & HEADING REFERENCE UNIT
420-00346-001	AHCP-CONTROL PANEL
420-01867-200	RMM-REMOTE MEMORY MODULE
4203-40-80-01	FLAPS POSITION INDICATOR
42-109-11-48	ROTOR ASSY
4340-050-00-00	AILERON TRIM POSITION INDICATOR
4349-150-80-10	RUDDER TRIM POSITION INDICATOR
4350-150-80-10	AILERON TRIM POSITION INDICATOR
441-0081-012	CVR CONNECTOR KIT
441-0081-044	CONNECTOR FDR
4428-150-80-10	FLAP POSITION INDICATOR
4428-150-80-11	FLAPS POSITION INDICATOR
4574004B0711	GPB BOARD (VSI-TCAS)
4574004B0901	GPB BOARD (VSI-TCAS)
4574004C0011	GPB BOARD (VSI-TCAS)
4574004C0311	GPB BOARD (VSI-TCAS)
4574004C0711	GPB BOARD (VSI-TCAS)
4574004C1311	GPB BOARD (VSI-TCAS)
457400EA0310	VSI-TCAS INDICATOR
457400EA0311	VSI-TCAS INDICATOR
457400EA0312	VSI-TCAS INDICATOR
457400EB0311	VSI-TCAS INDICATOR
457400EB0312	VSI-TCAS INDICATOR
457400FA0311	VSI-TCAS INDICATOR
457400FA0312	VSI-TCAS INDICATOR
457400FB0311	VSI-TCAS INDICATOR
457400FB0312	VSI-TCAS INDICATOR
457400GA0011	VSI-TCAS INDICATOR
457400GA0012	VSI-TCAS INDICATOR
457400GA0911	VSI-TCAS INDICATOR
457400GA1100	VSI-TCAS INDICATOR
457400GA1311	VSI-TCAS INDICATOR
457400GA1312	VSI-TCAS INDICATOR
457400GA1900	VSI-TCAS INDICATOR
457400GA1901	VSI-TCAS INDICATOR
457400GB0011	VSI-TCAS INDICATOR
457400GB0012	VSI-TCAS INDICATOR

457400GB0911	VSI-TCAS INDICATOR
457400GB1100	VSI-TCAS INDICATOR
457400GB1311	VSI-TCAS INDICATOR
457400GB1312	VSI-TCAS INDICATOR
457400GB1502	VSI-TCAS INDICATOR
457400GB1900	VSI-TCAS INDICATOR
457400GB1901	VSI-TCAS INDICATOR
457400GB2000	VSI-TCAS INDICATOR
457400GB2101	VSI-TCAS INDICATOR
457400HB1901	VSI-TCAS INDICATOR
457400JA1901	VSI-TCAS INDICATOR
457400JB1901	VSI-TCAS INDICATOR
457400KA0601	VSI-TCAS INDICATOR
457400KA1300	VSI-TCAS INDICATOR
457400KA1311	VSI-TCAS INDICATOR
457400KB1311	VSI-TCAS INDICATOR
457400KB1900	VSI-TCAS INDICATOR
457400KB1901	VSI-TCAS INDICATOR
457400LA1901	VSI-TCAS INDICATOR
457400LA2000	VSI-TCAS INDICATOR
457400MA1311	VSI-TCAS INDICATOR
457400MA1901	VSI-TCAS INDICATOR
457400MB1311	VSI-TCAS INDICATOR
457400MB1901	VSI-TCAS INDICATOR
457400PA1900	VSI-TCAS INDICATOR
457400PA1901	VSI-TCAS INDICATOR
457400PB1900	VSI-TCAS INDICATOR
457400PB1901	VSI-TCAS INDICATOR
457400RA0711	VSI-TCAS INDICATOR
457400RA0712	VSI-TCAS INDICATOR
457400RB0711	VSI-TCAS INDICATOR
457400RB0712	VSI-TCAS INDICATOR
457400SA0711	VSI-TCAS INDICATOR
457400SA0712	VSI-TCAS INDICATOR
457400SB0711	VSI-TCAS INDICATOR
457400SB0712	VSI-TCAS INDICATOR
457400TB0811	VSI-TCAS INDICATOR
457400TB0812	VSI-TCAS INDICATOR
457400TC0811	VSI-TCAS INDICATOR
457400TC0812	VSI-TCAS INDICATOR
457400UA1311	VSI-TCAS INDICATOR
457400UA1901	VSI-TCAS INDICATOR
457400UB1311	VSI-TCAS INDICATOR
457400UB1901	VSI-TCAS INDICATOR
457400WA0811	VSI-TCAS INDICATOR
457400WA0812	VSI-TCAS INDICATOR
457400WB0811	VSI-TCAS INDICATOR
457400WB0812	VSI-TCAS INDICATOR
457400ZA1501	VSI-TCAS INDICATOR
457400ZA1502	VSI-TCAS INDICATOR
457400ZB1502	VSI-TCAS INDICATOR
457452AA	LPS BOARD (VSI-TCAS)

457453AB	FC BOARD (VSI-TCAS)
457455BD	POWER SUPPLY BOARD VSI-TCAS
457455BE	POWER SUPPLY BOARD VSI-TCAS
457456AD	POWER SUPPLY BOARD VSI-TCAS
457458AC	DC BOARD (VSI-TCAS)
457458AE	DC BOARD (VSI-TCAS)
457458BA	DC BOARD (VSI-TCAS)
457459BB	I/O1 BOARD (VSI-TCAS)
457459BC	I/O1 BOARD (VSI-TCAS)
457459BD	I/O1 BOARD (VSI-TCAS)
457460AB	I/O2 BOARD (VSI-TCAS)
457460AC	I/O2 BOARD (VSI-TCAS)
457465BB	EQUIPED FRONT PANEL
457466HA	EQUIPED FRONT PANEL
457466KA	EQUIPED FRONT PANEL
457603AA0000	FDAU-FLIGHT DATA ACQUISITION UNIT
457603EA0101	FDAU-FLIGHT DATA ACQUISITION UNIT
4644708A	HYPERFREQUENCY SOURCE
4644709A	POWER SUPPLY BOARD
4644710A	AMPLI DISCRI
4644710B	AMPLI DISCRI
4644973A	PLO5 BOARD
4672971B	TRANSMITTER
4672971C	TRANSMITTER
4672971D	TRANSMITTER
4672972B	PST
4672973B	Power Supply Unit
4672982B	MS50 - Conveter
4672982C	MS50 - Conveter
4678447C	Power Supply
4678453C	ILS RF Module
4678459C	HIRF Module
4678460C	GPS Module
4678460E	GPS Module
4678460F	GPS Module
4678-700-80-10	ANGLE OF ATTACK INDICATOR
4679175B	PCB Assy
4679176B	BOARD
4679-750-80-11	FLAPS POSITION INDICATOR
4679-751-80-11	FLAPS POSITION INDICATOR
4679-754-80-10	FLAPS POSITION INDICATOR
4679-764-80-10	FLAPS POSITION INDICATOR
4680801A	HYPERFREQUENCY SOURCE
4689459B	DPU
4689459C	DPU
4689462B	HIRF
4689462C	HIRF
4689678B	RECEIVER
4689678C	RECEIVER
4689678E	RECEIVER
4689811B	PST
47215920BB00	PROBE HEAT COMPUTER

4863-14	TRIM INDICATOR
4863-15	TRIM INDICATOR
4863-19	TRIM INDICATOR
4863-221-80-00	TRIM INDICATOR
4863-222-80-00	TRIM INDICATOR
4863-226-80-00	TRIM INDICATOR
4863-228-80-00	TRIM INDICATOR
4863-229-80-00	TRIM INDICATOR
4863-230-80-00	TRIM INDICATOR
4863-231-80-00	TRIM INDICATOR
4863-501-80-11	TRIM INDICATOR
4863-502-80-10	TRIM INDICATOR
4863-503-80-10	TRIM INDICATOR
4863-504-80-11	TRIM INDICATOR
4863-557-80-13	TRIM INDICATOR
4863-558-80-11	TRIM INDICATOR
4863-559-80-10	TRIM INDICATOR
49310-31	INT.CAB.PRES.INDICATOR
49540-02	STATIC PROBE
49800-01	STATIC PROBE
5010-710-00-11	BTMU-BRAKE TEMPERATURE MONITORING UNIT
5010-825-00-14	ENGINE VIBRATION MONITORING COMPUTER
501-1770-03	STICK PUSHER ACTUATOR
501-1770-04	STICK PUSHER ACTUATOR
501-1771-02	STICK PUSHER CAPSTAN
501-1771-04	STICK PUSHER CAPSTAN
501-1771-04	STICK PUSHER CAPSTAN
5018-753-00-00	AUDIO MIXING AMPLIFIER
5050-102	BRAKE TEMPERATURE SENSOR
5050-103	BRAKE TEMPERATURE SENSOR
5050-104	BRAKE TEMPERATURE SENSOR
5050-120	BRAKE TEMPERATURE SENSOR
50620-10	PITOT PROBE
51200-11	MULTIFUNCTION SPOILER POWER CONTROL UNIT
51200-11	MULTIFUNCTION SPOILER POWER CONTROL UNIT
51200-11	MULTIFUNCTION SPOILER POWER CONTROL UNIT
51200-11	MULTIFUNCTION SPOILER POWER CONTROL UNIT
5126-220-80-11	FUEL TEMPERATURE INDICATOR
5126-223-80-11	FUEL TEMPERATURE INDICATOR
51400-1	GROUND SPOILERS ACTUATORS
51400-1	GROUND SPOILERS ACTUATORS
51600-9	GSSV-GROUND SPOILERS SELECTORS VALVE
51600-9	GSSV-GROUND SPOILERS SELECTORS VALVE
51600-9	GSSV-GROUND SPOILERS SELECTORS VALVE
5318-201-80-10	TEMPERATURE INDICATOR
5318-221-80-10	TEMPERATURE INDICATOR
5346-198-8	INDICATOR
5346-210-8	TEMPERATURE INDICATOR
5346-220-80-10	CABIN/DUCT TEMPERATURE INDICATOR
5347-700-80-10	DUAL LOW PRESSURE ROTOR INDICATOR
5348-200-80-10	FUEL TANK TEMPERATURE INDICATOR
53603-400-1	POWER SUPPLY BOARD



5423-708-80-10	INDICATEUR,N2
5423-713-80-10	INDICATEUR,N2
5426-214-8	OIL TEMPERATURE INDICATOR
5426-215-8	NACELLE TEMPERATURE INDICATOR
5426-216-8	CSD OIL TEMPERATURE INDICATOR
5426-234-8	OIL TEMPERATURE INICATOR
5426-406-00-10	HYDRAULIC RESERVOIR QUANTITY INDIC.
5427-115-80-10	HYDRAULIC PRESSURE INDICATOR
5427-116-80-10	DUAL DEICING PRESSURE INDICATOR
5427-218-80-10	DUAL FUEL TEMPERATURE INDICATOR
5427-361-80-10	DUAL OIL TEMPERATURE INDICATOR
5427-395-8	INDICATOR,DUAL OIL PRESSURE TEMPERATURE
5427-404-80-10	COMPT/DUCT DUAL INDICATOR
5428-150-80-10	PARK BRAKE HYD. PRESS. INDICATOR
5428-553-80-10	TURBINE TEMPERATURE INDICATOR
5428-554-91-03	TURBINE TEMPERATURE INDICATOR
5428-555-80-10	TURBINE TEMPERATURE INDICATOR
5428-559-80-10	TURBINE TEMPERATURE INDICATOR
5428-701-80-10	INDICATOR N1
5428-706-80-10	TURBINE SPEED INDICATOR
5502-380-80-10	DUAL HYDRAULIC INDICATOR
55205-840-1	BOARD
55205-840-2	BOARD
55205-938-2	BOARD
5611203A	POWER SUPPLY UNIT
5611204A	RECEIVER
5611206A	TRANSMITTER
5611206B	TRANSMITTER
5611324A	MATING CONNECTOR KIT EVR
5612-386-8	DUAL PRESSURE TEMPERATURE AND OIL INDICATOR
5612-386-80-11	OIL PRESSURE INDICATOR
56125775AA	ILS/RF
5616009A	GPS Module
5616009B	GPS Module
5616013B	PCB CMD
5616013C	CMD CCA
5616013D	CMD BOARD
5616014B	MON BOARD
5616122A	COMMAND CARD MODULE
5616122B	COMMAND CARD MODULE
5616123A	BOARD,MON PROGRAMMED
5616135A	CMD
5616136A	PCB MON
5616385A	DZUS MOUNTING ADAPTER SPC
5616488A	MOUNTING TRAY KIT EVR
56501-180-1	DISCRETE INPUT MODULE SDAC
56501-360-1	BACK ASSY
56501-360-2	BACK ASSY
56501-361-1	BACK ASSY
56501-361-2	BACK ASSY
56501-500-3	POWER SUPPLY BOARD SDAC
56501-512-02	SYNCHRO MODULE

56501-533-01	CI.UNITE CENT.COMP
56501-545-01	CPU BOARD SDAC
56501-545-1	CPU BOARD SDAC
56501-550-1	MUX-F MODULE SDAC
56501-560-2	R2F MODULE SDAC
56501-570-3	PC BOARD
56501-573-1	PC BOARD
56501-576-1	PC BOARD
56501-590-1	PC BOARD
56501-650-1	LLAC CARD
5672-781-8	INDICATOR
5674-146-80-10	BRAKE PRESSURE INDICATOR
5677-406-80-13	DUAL OIL TEMP./PRESS INDICATOR
5677-409-80-10	DUAL OIL TEMP./PRESS INDICATOR
5677-420-80-10	DUAL OIL TEMP./PRESS INDICATOR
5677-421-80-10	DUAL OIL TEMP./PRESS INDICATOR
5677-705-80-10	NH/NL SPEED INDICATOR
5677-750-80-12	TORQUE INDICATOR
5677-755-80-11	TORQUE INDICATOR
5677-756-80-10	TORQUE INDICATOR
5677-765-80-10	TORQUE INDICATOR
5677-766-80-10	TORQUE INDICATOR
5677-767-80-10	TORQUE INDICATOR
5678-553-80-12	TURBINE TEMPERATURE INDICATOR
5678-555-80-10	TURBINE TEMPERATURE INDICATOR
5678-556-80-11	TURBINE TEMPERATURE INDICATOR
5678-559-80-10	TURBINE TEMPERATURE INDICATOR
5678-704-80-11	NH INDICATOR
5678-707-80-10	NH INDICATOR
5678-710-80-12	NP INDICATOR
5678-711-80-10	NP INDICATOR
5678-713-80-10	NP INDICATOR
5678-715-80-10	NP INDICATOR
5678-716-80-10	NP INDICATOR
5865-655-8	BRAKE TEMPERATURE INDICATOR
5865-656-8	BRAKE TEMPERATURE INDICATOR
587-00107-001	PRESSURE SWITCH
587-00501-000	PRESSURE SWITCH
5897-651-8	CONTROL UNIT
5897-655-80-13	AIR CONDITIONG CONTROL UNIT
5898-581-8	BTMS-BRAKE TEMPERATURE MONITORING SYSTEM
5960-101-00-12	BRAKE TEMPERATURE MONITORING UNIT
5960-101-00-13	BRAKE TEMPERATURE MONITORING UNIT
60121-000-1	ENCODING ALTIMETER
60121-001-1	ENCODING ALTIMETER
60730-000-1	MACH TRANSDUCER
61013-387-1	APU OIL QUANTITY INDICATOR
61013-397-2	APU EGT INDICATOR
61014-398-2	APU N1,N2 RMP INDICATOR
61112-101-1	BRAKE TEMPERATURE INDICATOR
61140-004-1	AOA INDICATOR
61322-610-1	ALTITUDE REPEATER

61472-400-3	TACHOMETER INDICATOR
61472-402-3	TACHOMETER INDICATOR
61472-404-2	N2 INDICATOR
61472-405-1	RPM INDICATOR NH/NC (PW127D)
615-2630-001	ADF COMBINED SENSE LOOP ANTENNA
615-2630-001	ADF COMBINED SENSE LOOP ANTENNA
615-2630-002	ADF COMBINED SENSE LOOP ANTENNA
615-2630-002	ADF COMBINED SENSE LOOP ANTENNA
615-2630-102	ADF COMBINED SENSE LOOP ANTENNA
615-2630-102	ADF COMBINED SENSE LOOP ANTENNA
61531-000-1	AMBIENT & INLET TEMPERATURE INDICATOR
61531-005-1	AMBIENT & INLET TEMPERATURE INDICATOR
61531-006-1	AMBIENT & INLET TEMPERATURE INDICATOR
61531-007-1	AMBIENT & INLET TEMPERATURE INDICATOR
61550-001-4	FLAPS & SLATS POSITION INDICATOR
61550-001-6	FLAPS & SLATS POSITION INDICATOR
61550-001-7	FLAPS & SLATS POSITION INDICATOR
61550-007-3	FLAPS & SLATS POSITION INDICATOR
61551-000-1	FLAPS & SLATS POSITION INDICATOR
61551-101-2	FLAPS & SLATS POSITION INDICATOR
61551-102-1	FLAPS & SLATS POSITION INDICATOR
622-5812-001	FLUX VALVE
6310-01	75W LIGHTING CONTROLLER LCU-075
6310-20	150W LIGHTING CONTROLLER LCU-150
6310-30	300W LIGHTING CONTROLLER LCU-300
6310-40	25W LIGHTING CONTROLLER LCU-025
63230-035-2	AIRSPEED INDICATOR
63540-031-4	RMI-ADF INDICATOR
63540-040-1	RMI-ADF INDICATOR
63540-040-2	RMI-ADF INDICATOR
63540-040-3	RMI-ADF INDICATOR
63540-041-2	RMI/ADF INDICATOR
63540-041-3	RMI/ADF INDICATOR
63540-041-4	RMI/ADF INDICATOR
63540-156-3	DDRMI INDICATOR
63540-156-4	DDRMI INDICATOR
63540-170-2	DDRMI-VOR/DME INDICATOR
63540-170-3	DDRMI-VOR/DME INDICATOR
63540-170-4	DDRMI-VOR/DME INDICATOR
63540-250-2	DDRMI INDICATOR
63540-255-1	DDRMI INDICATOR
63543-150-1	DDRMI-VOR-DME INDICATOR
63543-150-2	DDRMI-VOR-ADF-DME INDICATOR
63543-150-3	DDRMI-VOR/DME INDICATOR
63543-150-4	DDRMI-VOR/DME INDICATOR
63543-150-5	DDRMI-VOR/DME INDICATOR
63543-250-1	DDRMI-VOR-ADF-DME INDICATOR
63543-250-2	DDRMI-VOR/ADF/DME INDICATOR
63543-250-3	DDRMI-VOR/ADF/DME INDICATOR
63543-250-4	DDRMI-VOR/ADF/DME INDICATOR
63543-253-1	DDRMI-VOR-ADF-DME INDICATOR
63543-253-2	DDRMI-ADF/VOR/DME INDICATOR

63543-253-3	DDRMI-ADF/VOR/DME INDICATOR
63543-253-4	DDRMI-ADF/VOR/DME INDICATOR
63543-270-1	DISTANCE BEARING INDICATOR (DBI)
63543-280-1	DISTANCE BEARING INDICATOR (DBI)
63543-280-2	DISTANCE BEARING INDICATOR (DBI)
63600-050-2	FF/FU INDICATOR (KG)
63600-050-2	FF/FU INDICATOR (KG)
63600-051-3	FF/FU INDICATOR (LB)
63600-051-3	FF/FU INDICATOR (LB)
63600-250-2	EGT INDICATOR (PW JT9D-7R4D1)
63600-250-2	EGT INDICATOR (PW JT9D-7R4D1)
63600-252-2	EGT INDICATOR (PW JT9D-7R4E1)
63600-252-2	EGT INDICATOR (PW JT9D-7R4E1)
63600-253-2	EGT INDICATOR (PW JT9D-7R4H1)
63600-253-2	EGT INDICATOR (PW JT9D-7R4H1)
63600-254-1	N2/N1/EGT INDICATOR
63600-254-1	N2/N1/EGT INDICATOR
63600-255-1	N2/N1/EGT INDICATOR
63600-255-1	N2/N1/EGT INDICATOR
63600-256-1	N2/N1/EGT INDICATOR
63600-256-1	N2/N1/EGT INDICATOR
63600-257-1	EGT INDICATOR (PW JT9D-7R4D1)
63600-257-1	EGT INDICATOR (PW JT9D-7R4D1)
63600-258-1	EGT INDICATOR (PW JT9D-7R4E1)
63600-258-1	EGT INDICATOR (PW JT9D-7R4E1)
63600-259-1	EGT INDICATOR (PW JT9D-7R4H1)
63600-259-1	EGT INDICATOR (PW JT9D-7R4H1)
63600-260-1	EGT INDICATOR (GE CF6-80C2A1,A2,A3)
63600-260-1	EGT INDICATOR (GE CF6-80C2A1,A2,A3)
63600-261-1	EGT INDICATOR (GE CF6-80A1,A3)
63600-261-1	EGT INDICATOR (GE CF6-80A1,A3)
63600-270-1	N2/N1/EGT INDICATOR
63600-270-1	N2/N1/EGT INDICATOR
63600-270-2	EGT INDICATOR (PW 4152)
63600-270-2	EGT INDICATOR (PW 4152)
63600-271-1	EGT INDICATOR (PW 4158)
63600-271-1	EGT INDICATOR (PW 4158)
63600-280-1	EGT INDICATOR (GE CF6-80C2A5F)
63600-280-1	EGT INDICATOR (GE CF6-80C2A5F)
63600-450-2	N1 INDICATOR (PW JT9D-7R4D1,E1,H1)
63600-450-2	N1 INDICATOR (PW JT9D-7R4D1,E1,H1)
63600-451-2	N2 INDICATOR (PW JT9D-7R4D1,E1)
63600-451-2	N2 INDICATOR (PW JT9D-7R4D1,E1)
63600-452-2	N2/N1/EGT INDICATOR
63600-452-2	N2/N1/EGT INDICATOR
63600-453-2	N2 INDICATOR (PW JT9D-7R4H1)
63600-453-2	N2 INDICATOR (PW JT9D-7R4H1)
63600-454-1	N2 INDICATOR (GE CF6-80C2A1,A2,A3)
63600-454-1	N2 INDICATOR (GE CF6-80C2A1,A2,A3)
63600-455-1	N2 INDICATOR (GE CF6-80A1,A3)
63600-455-1	N2 INDICATOR (GE CF6-80A1,A3)
63600-456-2	N1 INDICATOR (PW 4152,PW 4158)

63600-456-2	N1 INDICATOR (PW 4152,PW 4158)
63600-457-1	N2 INDICATOR (PW 4152)
63600-457-1	N2 INDICATOR (PW 4152)
63600-458-1	N2 INDICATOR (PW 4158)
63600-458-1	N2 INDICATOR (PW 4158)
63600-459-1	N2 INDICATOR (GE CF6-80C2A5F)
63600-459-1	N2 INDICATOR (GE CF6-80C2A5F)
63601-450-2	N1 INDICATOR (GE CF6-80A1,A3)
63601-450-2	N1 INDICATOR (GE CF6-80A1,A3)
63601-451-1	N1 INDICATOR (GE CF6-80C2A1,A2,A3)
63601-451-1	N1 INDICATOR (GE CF6-80C2A1,A2,A3)
63601-460-1	N1 INDICATOR (GE CF6-80C2A5F)
63601-460-1	N1 INDICATOR (GE CF6-80C2A5F)
63601-650-2	EPR INDICATOR (PW JT9D-7R4D1,E1,H1)
63601-650-2	EPR INDICATOR (PW JT9D-7R4D1,E1,H1)
63601-651-1	EPR INDICATOR (PW 4152,PW 4158)
63601-651-1	EPR INDICATOR (PW 4152,PW 4158)
63604-000-1	FF/FU INDICATOR LBS(FAA DEF.)
63604-001-1	FF/FU INDICATOR KGS(CAA DEF.)
63604-002-1	FF/FU INDICATOR KGS (PW127D)
63604-201-3	ITT INDICATOR (CAA DEF.)
63604-202-2	ITT INDICATOR (FAA DEF.)
63604-203-1	ITT INDICATOR (JAR126A)
63604-204-1	ITT INDICATOR (PW127D)
63604-210-2	ITT INDICATOR
63604-400-4	NP INDICATOR
63604-401-1	NP INDICATOR (FAA)
63604-410-3	N1 INDICATOR
63604-821-5	TORQUE INDICATOR (CAA DEF.)
63604-822-2	TORQUE INDICATOR (FAA DEF.)
63604-823-1	TORQUE INDICATOR (JAR126A)
63604-824-1	TORQUE INDICATOR (PW127D)
64010-193-1	AIRSPEED & MACH INDICATOR
64030-420-1	AIRSPEED & MACH INDICATOR
64032-220-1	AIRSPEED & MACH INDICATOR
64032-229-1	AIRSPEED & MACH INDICATOR
64040-560-1	AIRSPEED INDICATOR
64040-800-1	AIRSPEED INDICATOR
64040-860-1	AIRSPEED INDICATOR
64040-861-1	AIRSPEED INDICATOR
64040-862-1	AIRSPEED INDICATOR
64040-863-1	AIRSPEED INDICATOR
64050-660-1	AIRSPEED INDICATOR
64050-662-1	STANDBY AIRSPEED INDICATOR
64050-663-1	STANDBY AIRSPEED INDICATOR
64050-860-1	STANDBY AIRSPEED INDICATOR
64050-861-1	STANDBY AIRSPEED INDICATOR
64050-862-1	STANDBY AIRSPEED INDICATOR
64050-866-1	STANDBY AIRSPEED INDICATOR
64050-868-1	STANDBY AIRSPEED INDICATOR
64060-890-1	MAX.ALLOW A/S INDICATOR
64070-771-1	CABIN DIFFERENTIAL PRESSURE INDIC.

64080-071-1	CABIN VERTICAL SPEED INDICATOR
64089-360-1	VERTICAL SPEED INDICATOR
64111-350-1	STANDBY ALTIMETER
64111-350-1	STANDBY ALTIMETER
64111-350-1	STANDBY ALTIMETER
64111-390-2	STANDBY ALTIMETER
64111-390-2	STANDBY ALTIMETER
64111-390-2	STANDBY ALTIMETER
64111-790-1	ENCODING COUNTER/POINTER ALTIMETER
64111-790-1	ENCODING COUNTER/POINTER ALTIMETER
64111-790-1	ENCODING COUNTER/POINTER ALTIMETER
64111-900-1	COUNTER/POINTER ALTIMETER
64111-900-1	COUNTER/POINTER ALTIMETER
64111-900-1	COUNTER/POINTER ALTIMETER
64111-940-1	STANDBY ALTIMETER
64111-940-1	STANDBY ALTIMETER
64111-940-1	STANDBY ALTIMETER
64111-950-1	COUNTER/POINTER ALTIMETER
64111-950-1	COUNTER/POINTER ALTIMETER
64111-950-1	COUNTER/POINTER ALTIMETER
64111-951-1	COUNTER/POINTER ALTIMETER
64111-951-1	COUNTER/POINTER ALTIMETER
64111-951-1	COUNTER/POINTER ALTIMETER
64111-952-1	STANDBY ALTIMETER 3ATI
64111-952-1	STANDBY ALTIMETER 3ATI
64111-952-1	STANDBY ALTIMETER 3ATI
64111-953-1	STANDBY ALTIMETER 3ATI
64111-953-1	STANDBY ALTIMETER 3ATI
64111-953-1	STANDBY ALTIMETER 3ATI
64111-960-1	COUNTER/POINTER ALTIMETER (FT)
64111-960-1	COUNTER/POINTER ALTIMETER (FT)
64111-960-1	COUNTER/POINTER ALTIMETER (FT)
64111-982-1	STANDBY ALTIMETER
64111-982-1	STANDBY ALTIMETER
64111-982-1	STANDBY ALTIMETER
64111-990-2	COUNTER/POINTER ALTIMETER
64111-990-2	COUNTER/POINTER ALTIMETER
64111-990-2	COUNTER/POINTER ALTIMETER
64111-992-1	COUNTER/POINTER ALTIMETER
64111-992-1	COUNTER/POINTER ALTIMETER
64111-992-1	COUNTER/POINTER ALTIMETER
64111-999-1	STANDBY ALTIMETER
64111-999-1	STANDBY ALTIMETER
64111-999-1	STANDBY ALTIMETER
64131-560-1	STANDBY ALTIMETER (COUNTER METER)
64131-560-1	STANDBY ALTIMETER (COUNTER METER)
64131-560-1	STANDBY ALTIMETER (COUNTER METER)
64131-760-1	STANDBY ALTIMETER
64131-760-1	STANDBY ALTIMETER
64131-760-1	STANDBY ALTIMETER
64141-360-1	STANDBY ALTIMETER
64141-360-1	STANDBY ALTIMETER

64141-360-1	STANDBY ALTIMETER
64141-361-1	STANDBY ALTIMETER
64141-361-1	STANDBY ALTIMETER
64141-361-1	STANDBY ALTIMETER
64141-362-1	STANDBY ALTIMETER (MB,FEET)
64141-362-1	STANDBY ALTIMETER (MB,FEET)
64141-362-1	STANDBY ALTIMETER (MB,FEET)
64141-370-1	STANDBY ALTIMETER
64141-370-1	STANDBY ALTIMETER
64141-370-1	STANDBY ALTIMETER
64141-372-1	STANDBY ALTIMETER (HG,FEET)
64141-372-1	STANDBY ALTIMETER (HG,FEET)
64141-372-1	STANDBY ALTIMETER (HG,FEET)
64141-520-1	STANDBY ALTIMETER (inch)
64141-520-1	STANDBY ALTIMETER (inch)
64141-520-1	STANDBY ALTIMETER (inch)
64141-521-1	STANDBY ALTIMETER
64141-521-1	STANDBY ALTIMETER
64141-521-1	STANDBY ALTIMETER
64141-530-1	STANDBY ALTIMETER (mb)
64141-530-1	STANDBY ALTIMETER (mb)
64141-530-1	STANDBY ALTIMETER (mb)
64141-560-1	STANDBY ALTIMETER (MB)
64141-560-1	STANDBY ALTIMETER (MB)
64141-560-1	STANDBY ALTIMETER (MB)
64141-564-1	STANDBY ALTIMETER
64141-564-1	STANDBY ALTIMETER
64141-564-1	STANDBY ALTIMETER
64141-570-1	STANDBY ALTIMETER (INCH)
64141-570-1	STANDBY ALTIMETER (INCH)
64141-570-1	STANDBY ALTIMETER (INCH)
64141-571-1	STANDBY ALTIMETER (INCH)
64141-571-1	STANDBY ALTIMETER (INCH)
64141-571-1	STANDBY ALTIMETER (INCH)
64141-580-1	STANDBY ALTIMETER (FT,HPA)
64141-580-1	STANDBY ALTIMETER (FT,HPA)
64141-580-1	STANDBY ALTIMETER (FT,HPA)
64141-582-1	STANDBY ALTIMETER (FT)
64141-582-1	STANDBY ALTIMETER (FT,HPA)
64141-582-1	STANDBY ALTIMETER (FT,HPA)
64141-590-1	STANDBY ALTIMETER (FT,IN.HG)
64141-590-1	STANDBY ALTIMETER (FT,HPA)
64141-590-1	STANDBY ALTIMETER (FT,HPA)
64141-861-1	CABIN ALTIMETER INDICATOR (MB)
64141-861-1	CABIN ALTIMETER INDICATOR (MB)
64141-861-1	CABIN ALTIMETER INDICATOR (MB)
64141-862-1	CABIN ALTIMETER INDICATOR (INCH)
64141-862-1	CABIN ALTIMETER INDICATOR (INCH)
64141-862-1	CABIN ALTIMETER INDICATOR (INCH)
64142-230-1	ALTIMETER
64142-523-1	ALTIMETER
64142-540-1	ALTIMETER

64161-230-1	STANDBY ALTIMETER
64161-230-1	STANDBY ALTIMETER
64161-230-1	STANDBY ALTIMETER
64161-233-1	STANDBY ALTIMETER
64161-233-1	STANDBY ALTIMETER
64161-233-1	STANDBY ALTIMETER
64161-234-1	STANDBY ALTIMETER (M,Hpa)
64161-234-1	STANDBY ALTIMETER (M,Hpa)
64161-234-1	STANDBY ALTIMETER (M,Hpa)
64161-237-1	COUNTER/POINTER ALTIMETER
64161-237-1	COUNTER/POINTER ALTIMETER
64161-237-1	COUNTER/POINTER ALTIMETER
64161-238-1	COUNTER/POINTER ALTIMETER
64161-238-1	COUNTER/POINTER ALTIMETER
64161-238-1	COUNTER/POINTER ALTIMETER
64170-371-1	CABIN ALTITUDE INDICATOR
64250-005-1	HYDRAULIC PRESSURE TRANSMITTER
64250-005-2	HYDRAULIC PRESSURE TRANSMITTER
64250-025-1	PRESSURE TRANSMITTER
64250-025-2	PRESSURE TRANSMITTER
64251-200-1	PRESSURE TRANSMITTER
64251-417-2	PRESSURE TRANSMITTER
64279-512-1	PRESSURE TRANSMITTER
64279-530-2	HYDRAULIC PRESSURE TRANSMITTER
64279-543-1	PRESSURE TRANSMITTER
64660-506-1	TEMPERATURE SENSOR
64665-500-1	TEMPERATURE SENSOR
64757-138-5	PRESSURE TRANSMITTER
64757-139-5	PRESSURE TRANSMITTER
64757-140-5	PRESSURE TRANSMITTER
64801-006-1	HYDRAULIC PRESSURE INDICATOR
64801-018-1	PRESSURE QUANTITY INDICATOR
64801-024-1	HYDRAULIC PRESSURE INDICATOR
64820-408-1	FUEL PRESSURE INDICATOR (PW)
64820-409-1	OIL PRESSURE INDICATOR (PW)
64820-410-1	FUEL PRESSURE INDICATOR (GE)
64820-411-1	OIL PRESSURE INDICATOR
64820-418-1	OIL PRESSURE INDICATOR (AIDS) (PW)
64820-420-1	OIL QUANTITY INDICATOR AIDS
64822-407-1	OIL TEMPERATURE INDICATOR (PW)
64822-408-1	OIL QUANTITY INDICATOR (AIDS) (PW)
64822-424-1	APU OIL QUANTITY INDICATOR
64822-425-1	APU RPM INDICATOR
64822-426-1	APU EGT INDICATOR
64857-402-1	DUAL TEMPERATURE INDICATOR (PW)
64857-407-1	PACK TURBIN TEMPERATURE INDICATOR
64857-412-1	PACK TURBINE TEMPERATURE INDICATOR
64857-418-1	DUAL INDICATOR
64878-000-1	DUAL HYDRAULIC PRESSURE INDICATOR
64880-400-2	DUAL COMBINED INDICATOR
64880-403-2	OIL PRESSURE QUANTITY INDICATOR
64880-405-1	DUAL CONTENTS INDICATOR



64880-413-1	DUAL PRESSURE INDICATOR
64880-415-1	DUAL OIL QUANTITY INDICATOR
64880-418-1	DUAL OIL PRESSURE QUANTITY INDICATOR
64880-419-1	OIL PRESSURE QUANTITY INDICATOR
64880-420-1	DUAL OIL PRESSURE QUANTITY INDICATOR
64882-202-1	TRIPLE HYDRAULIC PRESSURE INDICATOR
64882-203-1	TRIPLE HYDRAULIC PRESSURE INDICATOR
64882-206-1	BRAKE PRESSURE INDICATOR
64882-900-1	OIL PRESS/QTY/TEMP INDICATOR
64882-901-1	OIL TEMP.- QTY- PRESS. - APU INDICATOR
64882-904-1	TRIPLE OIL INDICATOR
64883-600-2	FLAPS POSITION INDICATOR
64883-602-1	FLAPS POSITION INDICATOR
64884-600-4	TRIPLE INDICATOR (CAA DEF.)
64884-602-3	TRIPLE INDICATOR (CAA DEF.)
64884-602-4	TRIPLE INDICATOR (CAA DEF.)
64884-606-2	TRIPLE INDICATOR (FAA DEF.)
64884-607-1	TRIPLE INDICATOR (PW127D)
64891-002-2	CONTROL SURFACE POSITION INDICATOR
64891-002-3	CONTROL SURFACE POSITION INDICATOR
64891-002-4	CONTROL SURFACE POSITION INDICATOR
64901-005-1	UNIT INLET FLOW INDICATOR
64901-006-1	VALVE POSITION INDICATOR
64901-009-1	AIR CONDITIONING INDICATOR
64902-004-2	HYDRAULIC QTY INDICATOR
64902-051-1	AIR CONDITIONING INDICATOR
64902-052-1	HYDRAULIC QUANTITY INDICATOR (Y)
64902-053-1	HYDRAULIC QUANTITY INDICATOR (B)
64902-054-1	HYDRAULIC QUANTITY INDICATOR (G)
64902-055-1	HYDRAULIC QUANTITY INDICATOR (Y)
64902-056-1	HYDRAULIC QUANTITY INDICATOR (B)
64902-057-1	HYDRAULIC QUANTITY INDICATOR (G)
64902-059-1	HYDRAULIC QUANTITY INDICATOR (Y)
64902-060-1	HYDRAULIC QUANTITY INDICATOR (B)
64902-061-1	HYDRAULIC QUANTITY INDICATOR (G)
64902-062-1	HYDRAULIC QUANTITY INDICATOR (Y)
64902-063-1	HYDRAULIC QUANTITY INDICATOR (B)
64902-064-1	HYDRAULIC QUANTITY INDICATOR (G)
64902-065-1	HYDRAULIC QUANTITY INDICATOR (G)
64902-067-1	HYDRAULIC QUANTITY INDICATOR (G)
64902-100-1	HYDRAULIC QUANTITY REPEATER INDICATOR
64902-101-1	HYDRAULIC QTY/AIR CONDIT. INDICATOR
64952-001-1	PNEU. TEMPERATURE INDICATOR
64952-002-2	TEMPERATURE INDICATOR
64952-004-2	TEMPERATURE INDICATOR
64953-026-1	GROUND SPEED INDICATOR
65205-211-2	ALTIMETER
65205-211-3	ALTIMETER
65205-211-4	ALTIMETER
65205-230-1	ALTIMETER
65205-230-2	ALTIMETER
65205-230-3	ALTIMETER

65205-230-4	ALTIMETER
65205-230-5	ALTIMETER
65205-235-1	ALTIMETER
65205-235-2	ALTIMETER
65691-005-1	FUEL RATE OF FLOW INDICATOR
65691-006-1	FUEL RATE OF FLOW INDICATOR
65691-099-1	FUEL FLOW/FUEL USED INDICATOR
65691-122-1	EGT INDICATOR
65691-204-1	N1 INDICATOR (3CHANNELS) GE CF650C2
65691-255-1	N2 INDICATOR ENGINE PW JT9D
65691-256-1	N1 INDICATOR ENGINE PW JT9D59A
65691-257-1	N2 INDICATOR ENGINE GE CF650C2
65691-301-1	EPR INDICATOR ENGINE PW JT9D59A
65691-400-1	PT5,4 PRESSURE INDICATOR
65806-002-1	ELECTRONIC CLOCK
65807-000-1	ELECTRONIC CLOCK
65807-002-1	ELECTRONIC CLOCK
65807-010-1	ELECTRONIC CLOCK
65807-040-1	ELECTRONIC CLOCK
65807-050-1	ELECTRONIC CLOCK
65807-051-1	ELECTRONIC CLOCK
65907-103-2	MACH-AIRSPED INDICATOR
65913-100-2	TAS/SAT/TAT INDICATOR
65913-103-1	TAS/SAT/TAT INDICATOR
66205-002-1	BRAKE TEMPERATURE CONDITIONNER UNIT
66501-001-3	SDAC-SYSTEM DATA ANALOGIC COMPUTER
66501-003-1	SDAC-SYSTEM DATA ANALOGIC COMPUTER
66501-004-2	SDAC-SYSTEM DATA ANALOGIC COMPUTER
66501-005-1	SDAC-SYSTEM DATA ANALOGIC COMPUTER
66600-000-2	FDEP-FLIGHT DATA ENTRY PANEL
6700-300-80-10	AC POWER MONITOR
6700-400-80-11	DC POWER MONITOR
6800-100-80-10	BATTERY TEMPERATURE MONITOR
705-15V1	GYROSCOPIC HORIZON
705-15V1	GYROSCOPIC HORIZON
705-15V10	GYROSCOPIC HORIZON
705-15V10	GYROSCOPIC HORIZON
705-15V1M1	GYROSCOPIC HORIZON
705-15V1M1	GYROSCOPIC HORIZON
705-15V3	GYROSCOPIC HORIZON
705-15V3	GYROSCOPIC HORIZON
705-15V4	GYROSCOPIC HORIZON
705-15V4	GYROSCOPIC HORIZON
705-15V9	GYROSCOPIC HORIZON
705-15V9	GYROSCOPIC HORIZON
705-16	GYROSCOPIC HORIZON
705-16	GYROSCOPIC HORIZON
705-16V3	GYROSCOPIC HORIZON
705-16V3	GYROSCOPIC HORIZON
705-7V3M1	GYROSCOPIC HORIZON
705-7V3M1	GYROSCOPIC HORIZON
705-7V4	GYROSCOPIC HORIZON

705-7V4	GYROSCOPIC HORIZON
705-7V42M1	GYROSCOPIC HORIZON
705-7V42M1	GYROSCOPIC HORIZON
705-7V4M1	GYROSCOPIC HORIZON
705-7V4M1	GYROSCOPIC HORIZON
705-7V61	GYROSCOPIC HORIZON
705-7V61	GYROSCOPIC HORIZON
705-7V81	GYROSCOPIC HORIZON
705-7V81	GYROSCOPIC HORIZON
705-7V81M1	GYROSCOPIC HORIZON
705-7V81M1	GYROSCOPIC HORIZON
705-7V86	GYROSCOPIC HORIZON
705-7V86	GYROSCOPIC HORIZON
705-7V91M1	GYROSCOPIC HORIZON
705-7V91M1	GYROSCOPIC HORIZON
705-7V92M1	GYROSCOPIC HORIZON
705-7V92M1	GYROSCOPIC HORIZON
705-7V9M1	GYROSCOPIC HORIZON
705-7V9M1	GYROSCOPIC HORIZON
7074-4	MCU-MOTOR CONTROL UNIT
7074-5	MCU-MOTOR CONTROL UNIT
76-01V1M2	BOITE TRANSVERSALE
803-2	GYROSCOPIC HORIZON
8055515-4504	PTA-45B Half size ACARS printer
81-00000	RATE GYRO UNIT
81-00001	RATE GYRO UNIT
8107-110-00-10	ENGINE OIL PRESSURE SENSOR
8107-134-00-12	CAPTEUR DE PRESSION HYDRAULIQUE
8312-120-00-10	TEMPERATURE SENSOR
8314-102-00-00	TEMPERATURE SENSOR
8316-103-00-10	TEMPERATURE SENSOR
8400-025-00-11	CURRENT TRANSFORMER
8400-040-00-10	CURRENT TRANSFORMER
8489-6	HSTA-HORIZONTAL STAB. TRIM ACTUATOR
8489-6	HSTA-HORIZONTAL STAB. TRIM ACTUATOR
8489-7	HSTA-HORIZONTAL STAB. TRIM ACTUATOR
8489-7	HSTA-HORIZONTAL STAB. TRIM ACTUATOR
8489-713-1	HSTA MOTOR
8489-713-2	HSTA MOTOR
8489-800-1	HSTA POSITION SENSOR
8489-800-1	HSTA POSITION SENSOR
87093490V04	BOARD AEVC
87093490V05	BOARD AEVC
87093490V07	BOARD AEVC
87093490V09	BOARD AEVC
87093490Z09	BOARD AEVC
87093547V00	BOARD AEVC
87093762V06	MAIN BOARD FCDC
87093762V07	MAIN BOARD FCDC
87232323V00	DUCT TEMPERATURE SENSOR
87232323V01	DUCT TEMPERATURE SENSOR
87232324V00	SKIN TEMPERATURE SENSOR

87232329V02	AIR DATA MEASUREMENT
87232329V03	AIR DATA MEASUREMENT
87232329V05	AIR DATA MEASUREMENT
87292325V04	AVIONIC EQPT VENTILATION COMPUTER
87292325V05	AVIONIC EQPT VENTILATION COMPUTER
87292325V06	AVIONIC EQPT VENTILATION COMPUTER
87292337V04L07	FLIGHT CONTROL DATA CONCENTRATOR
87292337V04L08	FLIGHT CONTROL DATA CONCENTRATOR
87292337V04L09	FLIGHT CONTROL DATA CONCENTRATOR
87292337V04L0A	FLIGHT CONTROL DATA CONCENTRATOR
87292337V04L11	FLIGHT CONTROL DATA CONCENTRATOR
87292337V04L12	FLIGHT CONTROL DATA CONCENTRATOR
87292337V04M01	FLIGHT CONTROL DATA CONCENTRATOR
87292337V04M02	FLIGHT CONTROL DATA CONCENTRATOR
87292337V04N02	FLIGHT CONTROL DATA CONCENTRATOR
87292337V04N03	FLIGHT CONTROL DATA CONCENTRATOR
87292337V04X03	FLIGHT CONTROL DATA CONCENTRATOR
879-2525-006	DUAL ATC CONTROL UNIT (MODE S)
879-2525-007	DUAL ATC CONTROL UNIT (MODE S)
879-2525-012	DUAL ATC CONTROL UNIT (MODE S)
879-2525-013	DUAL ATC CONTROL UNIT (MODE S)
879-2525-014	DUAL ATC CONTROL UNIT (TCAS)
879-2525-015	DUAL ATC CONTROL UNIT (TCAS)
879-2525-016	DUAL ATC CONTROL UNIT (TCAS)
889-2323-004	ILS CONTROL UNIT
889-2323-006	ILS CONTROL UNIT
889-2323-007	ILS CONTROL UNIT
889-2323-017	ILS CONTROL UNIT
889-2625-004	ADF CONTROL UNIT
899-0850-001	RMP-RADIO MANAGEMENT PANEL
899-0850-002	RMP-RADIO MANAGEMENT PANEL
899-0850-003	RMP-RADIO MANAGEMENT PANEL
899-0850-004	RMP-RADIO MANAGEMENT PANEL
899-2125-003	VHF CONTROL UNIT-EXTENDED RANGE
899-2125-003	VHF CONTROL UNIT-EXTENDED RANGE
899-2125-004	VHF CONTROL UNIT-EXTENDED RANGE
899-2125-004	VHF CONTROL UNIT-EXTENDED RANGE
899-2125-014	VHF CONTROL UNIT-EXTENDED RANGE
899-2125-014	VHF CONTROL UNIT-EXTENDED RANGE
899-2223-004	VOR/DME CONTROL UNIT
899-2223-008	VOR/DME CONTROL UNIT
899-2223-018	VOR/DME CONTROL UNIT
899-2725-007	HF CONTROL UNIT
899-2725-009	HF CONTROL UNIT
903-1342	HAND MICROPHONE
9075-101	COMPENSATOR
965-0686-025	GPWS COMPUTER
965-0758-001	MANAGEMENT UNIT ACARS
965-0976-040-214-214	EGPWS COMPUTER
980-4700-027	SSFDR-SOLID STATE FLIGHT DATA RECORDER
980-6022-011	SSCVR-SOLID STATE COCKPIT VOICE RECORDER
980-6113-004	CVR REMOTE MIC

980-6116-004	CVR CONTROL BOX
ACP2531AC02	AUDIO CONTROL PANEL
AH2542AT02	ATTENDANT HANDSET
AH2542AT03	ATTENDANT HANDSET
AK2542CL02	KEYBOARD FORWARD ATTENDANT VERSION N° 1
AK2542CL03	KEYBOARD FORWARD ATTENDANT VERSION N° 1
AK2542CL04	KEYBOARD FORWARD ATTENDANT VERSION N° 1
B16AM5	PITCH COMPENSATION COMPUTER
B217AAM4	THRUST CONTROL COMPUTER
B217AAM5	THRUST CONTROL COMPUTER
B217AAM6	THRUST CONTROL COMPUTER
B217AAM7	THRUST CONTROL COMPUTER
B217ABM6	THRUST CONTROL COMPUTER
B217ACM7	THRUST CONTROL COMPUTER
B217ADM5	THRUST CONTROL COMPUTER
B218ABM8	FLIGHT AUGMENTATION COMPUTER
B219ABM5	FLIGHT AUGMENTATION COMPUTER
B219ABM6	FLIGHT AUGMENTATION COMPUTER
B220AAM1	THRUST CONTROL COMPUTER
B220ABM4	THRUST CONTROL COMPUTER
B221AAM6	FLIGHT AUGMENTATION COMPUTER
B221AAM8	FLIGHT AUGMENTATION COMPUTER
B254ADM1	STATIC INVERTER
B298ABM3	CALCULATEUR TCC
B2BM1	A/S YAW COMPUTER
B2CM0	A/S YAW COMPUTER
B350AAM4	FLIGHT CONTROL COMPUTER
B350AAM6	FLIGHT CONTROL COMPUTER
B351ACM4	THRUST CONTROL COMPUTER
B352AAM1	FLIGHT AUGMENTATION COMPUTER
B352AAM3	FLIGHT AUGMENTATION COMPUTER
B372ABBM	INTERCONNECTION MODULE
B372ABM0710	SPOILER AND ELEVATOR COMPUTER
B372ABM0710	SPOILER AND ELEVATOR COMPUTER
B372ABM0710	SPOILER AND ELEVATOR COMPUTER
B372ABM0713	SPOILER AND ELEVATOR COMPUTER
B372ABM0713	SPOILER AND ELEVATOR COMPUTER
B372ABM0713	SPOILER AND ELEVATOR COMPUTER
B372BABM1	INTERCONNECTION MODULE
B372BAM0303	SPOILER AND ELEVATOR COMPUTER
B372BAM0303	SPOILER AND ELEVATOR COMPUTER
B372BAM0303	SPOILER AND ELEVATOR COMPUTER
B372BAM0404	SPOILER AND ELEVATOR COMPUTER
B372BAM0404	SPOILER AND ELEVATOR COMPUTER
B372BAM0404	SPOILER AND ELEVATOR COMPUTER
B372BAM0406	SPOILER AND ELEVATOR COMPUTER
B372BAM0406	SPOILER AND ELEVATOR COMPUTER
B372BAM0406	SPOILER AND ELEVATOR COMPUTER
B372BAM05	BUZZER ASSEMBLY
B372BAM0508	SPOILER AND ELEVATOR COMPUTER
B372BAM0508	SPOILER AND ELEVATOR COMPUTER
B372BAM0508	SPOILER AND ELEVATOR COMPUTER

B372BAM0509	SPOILER AND ELEVATOR COMPUTER
B372BAM0509	SPOILER AND ELEVATOR COMPUTER
B372BAM0509	SPOILER AND ELEVATOR COMPUTER
B372BAM0510	SPOILER AND ELEVATOR COMPUTER
B372BAM0510	SPOILER AND ELEVATOR COMPUTER
B372BAM0510	SPOILER AND ELEVATOR COMPUTER
B372BAM0511	SPOILER AND ELEVATOR COMPUTER
B372BAM0511	SPOILER AND ELEVATOR COMPUTER
B372BAM0511	SPOILER AND ELEVATOR COMPUTER
B372BAM0512	SPOILER AND ELEVATOR COMPUTER
B372BAM0512	SPOILER AND ELEVATOR COMPUTER
B372BAM0512	SPOILER AND ELEVATOR COMPUTER
B397BAM0407	FLIGHT AUGMENTATION COMPUTER
B397BAM0509	FLIGHT AUGMENTATION COMPUTER
B397BAM0510	FLIGHT AUGMENTATION COMPUTER
B397BAM0511	FLIGHT AUGMENTATION COMPUTER
B397BAM0513	FLIGHT AUGMENTATION COMPUTER
B397BAM0514	FLIGHT AUGMENTATION COMPUTER
B397BAM0515	FLIGHT AUGMENTATION COMPUTER
B397BAM0516	FLIGHT AUGMENTATION COMPUTER
B397BAM0617	FLIGHT AUGMENTATION COMPUTER
B397BAM0618	FLIGHT AUGMENTATION COMPUTER
B397BAM0619	FLIGHT AUGMENTATION COMPUTER
B397CAM0101	FLIGHT AUGMENTATION COMPUTER
B397CAM0102	FLIGHT AUGMENTATION COMPUTER
B398AAM04	FMGC BASE ASSEMBLY
B398AAM0408	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B398AAM0410	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B398AAM0411	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B398AAM0412	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B398BABM	INTERCONNECTION MODULE
B398BAM0202	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B398BAM0204	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B398BAM0205	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B398BAM0207	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B398BAM0208	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B398BAM0209	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B398BAM02S5	SIMSOFTE FLIGHT MNGT & GUIDANCE COMPUTER
B398BCM0104	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B398BCM0106	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B398BCM0107	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B398BCM0108	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B398BCM0109	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B398BCM01S4	SIMSOFTE FLIGHT MNGT & GUIDANCE COMP
B3BM2	LONGITUDINAL COMPUTER
B3CM0	LONGITUDINAL COMPUTER
B3CM1	LONGITUDINAL COMPUTER
B3DM0	LONGITUDINAL COMPUTER
B401ACM0506	CENTRALIZED FAULT DISPLAY INT. UNIT
B401ACM0507	CENTRALIZED FAULT DISPLAY INT. UNIT
B415AAM3	THRUST CONTROL COMPUTER
B415AAM4	THRUST CONTROL COMPUTER

B415ABM	THRUST CONTROL COMPUTER
B415ABM1	THRUST CONTROL COMPUTER
B459AABM2	INTERCONNECTION MODULE
B470AAM2	FLIGHT CONTROL COMPUTER
B470ABM2	FLIGHT CONTROL COMPUTER
B470ACM	FLIGHT AUGMENTATION COMPUTER
B470ADM	FLIGHT AUGMENTATION COMPUTER
B470ADM1	FLIGHT AUGMENTATION COMPUTER
B470ADM2	FLIGHT AUGMENTATION COMPUTER
B471AAM2	FLIGHT AUGMENTATION COMPUTER
B471AAM3	FLIGHT AUGMENTATION COMPUTER
B471AAM5	FLIGHT AUGMENTATION COMPUTER
B471AAM6	FLIGHT AUGMENTATION COMPUTER
B471AAM7	FLIGHT AUGMENTATION COMPUTER
B471AAM8	FLIGHT AUGMENTATION COMPUTER
B471ABM1	FLIGHT AUGMENTATION COMPUTER
B471ABM3	FLIGHT AUGMENTATION COMPUTER
B471ABM4	FLIGHT AUGMENTATION COMPUTER
B471ABM5	FLIGHT AUGMENTATION COMPUTER
B471ACM	FLIGHT AUGMENTATION COMPUTER
B472AAM	THRUST CONTROL COMPUTER
B472AAM1	THRUST CONTROL COMPUTER
B472AAM2	THRUST CONTROL COMPUTER
B473AAM1	CENTER OF GRAVITY CONTROL COMPUTER
B473AAM2	CENTER OF GRAVITY CONTROL COMPUTER
B473ABM2	CENTER OF GRAVITY CONTROL COMPUTER
B473ABM4	CENTER OF GRAVITY CONTROL COMPUTER
B473ACM2	CENTER OF GRAVITY CONTROL COMPUTER
B473ACM4	CENTER OF GRAVITY CONTROL COMPUTER
B490AAM0205	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
B490AAM0207	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
B490AAM0209	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
B490AAM0310	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
B490AAM0313	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
B490AAP03	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
B490BAM0106	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
B490BAM0307	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
B490BAM0308	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
B490BAM0309	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
B490BAM0310	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
B490CAM0305	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
B490CAM0306	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
B490CAM0307	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
B490CAM0308	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
B490DAM0104	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
B492AAM04	FCSC BASE ASSEMBLY
B492AAM0407	FCSC-FLIGHT CONTROL SECONDARY COMPUTER
B492AAM0408	FCSC-FLIGHT CONTROL SECONDARY COMPUTER
B492AAM0409	FCSC-FLIGHT CONTROL SECONDARY COMPUTER
B492AAM0410	FCSC-FLIGHT CONTROL SECONDARY COMPUTER
B492AAM0411	FCSC-FLIGHT CONTROL SECONDARY COMPUTER
B494AAM0609	FCMC-FUEL CONTROL & MONITORING COMPUTER

B494AAM0612	FCMC-FUEL CONTROL & MONITORING COMPUTER
B494AAM0613	FCMC-FUEL CONTROL & MONITORING COMPUTER
B494AAM0614	FCMC-FUEL CONTROL & MONITORING COMPUTER
B494AAM0615	FCMC-FUEL CONTROL & MONITORING COMPUTER
B494AAM0616	FCMC-FUEL CONTROL & MONITORING COMPUTER
B4BM0	LATERAL COMPUTER
B4CM0	LATERAL COMPUTER
B4DM1	LATERAL COMPUTER
B4FM0	LATERAL COMPUTER
B4FM1	LATERAL COMPUTER
B4GM0	LATERAL COMPUTER
B4GM1	LATERAL COMPUTER
B539AAM0206	FQIC-FUEL QUANTITY INDIC. COMPUTER
B539AAM0307	FQIC-FUEL QUANTITY INDIC. COMPUTER
B546BAM02	FMGC BASE ASSEMBLY
B546BAM0203	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B546BAM0204	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B546BAM0205	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B546BAM0206	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B546BCM02	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B546BCM0204	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B546BCM0205	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B546BCM02S1	SIMSOFI FLIGHT MNGT & GUIDANCE COMPUTER
B546CAM0101	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B546CAM0102	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B546CAM0103	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B546CAM0104	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B546CCM01	FMGC BASE ASSEMBLY
B546CCM0102	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B546CCM0104	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B546CCM0105	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B546CCM0106	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
B5DM1	LOGIC COMPUTER
B5EM1	LOGIC COMPUTER
B5EM2	LOGIC COMPUTER
B5FM1	LOGIC COMPUTER
B5GM0	LOGIC COMPUTER
B5HM0	LOGIC COMPUTER
B5HM1	LOGIC COMPUTER
B6BM6	TEST COMPUTER
B6EM1	TEST COMPUTER
B6FM0	TEST COMPUTER
B6FM1	TEST COMPUTER
B6FM2	TEST COMPUTER
B6FM3	TEST COMPUTER
B77AM1	SRS COMPUTER
B77CM0	SRS COMPUTER
B77DM0	SRS COMPUTER
B7BM4	A/TH COMPUTER
B7CM1	A/TH COMPUTER
B7DM0	A/TH COMPUTER
B7EM0	A/TH COMPUTER



B8AM3	PITCH TRIM COMPUTER
BC2065C	CONTROL BOX
C12349AA01	PRINTER
C12349AB02	PRINTER
C12349AC02	PRINTER
C12349AD03	PRINTER
C12349CA01	PRINTER
C12349CB02	PRINTER
C12349CC03	PRINTER
C12349DA01	PRINTER
C12349DA02	PRINTER
C12351AA	ADF COMBINED SENSE LOOP ANTENNA
C12377AC02	HEAD UP CONTROL PANEL
C12377CA01	HEAD UP CONTROL PANEL
C12402AA01	ATC CONTROL UNIT (TCAS)
C12402AA02	ATC CONTROL UNIT (TCAS)
C12402BA02	ATC CONTROL UNIT (TCAS)
C12402BA03	ATC CONTROL UNIT (TCAS)
C12404AA01	ATC CONTROL UNIT (TCAS)
C12404AB02	ATC CONTROL UNIT (TCAS)
C12404BA02	ATC CONTROL UNIT (TCAS)
C12404BB03	ATC CONTROL UNIT (TCAS)
C12404CA01	ATC CONTROL UNIT (MODE S)
C12404DA01	ATC CONTROL UNIT (MODE S)
C12404EA01	ATC CONTROL UNIT (TCAS)
C12404EA02	ATC CONTROL UNIT (TCAS)
C12412AB03	ENGINE DATA CONCENTRATOR
C12424AD	FGCP-FLIGHT GUIDANCE CONTROL PANEL
C12424AE	FGCP-FLIGHT GUIDANCE CONTROL PANEL
C12427AC	ESCP-ESID CONTROL PANEL
C12427AD	ESCP-ESID CONTROL PANEL
C12427AE	ESCP-ESID CONTROL PANEL
C12428DA	EFCP-EFIS CONTROL PANEL
C12428DC	EFCP-EFIS CONTROL PANEL
C12428DD	EFCP-EFIS CONTROL PANEL
C12429AA06	FGM-FLIGHT GUIDANCE MODULE
C12429AA07	FGM-FLIGHT GUIDANCE MODULE
C12429AA08	FGM-FLIGHT GUIDANCE MODULE
C12431AB	INPUT/OUTPUT MODULE
C12432AA05	INPUT/OUTPUT PROCESSOR MODULE
C12432AA06	INPUT/OUTPUT PROCESSOR MODULE
C12438AB01	EVMC
C12838AD	ICP-INDEX CONTROL PANEL
C12838BA	ICP-INDEX CONTROL PANEL (ALTERNATE SYMBOLOGY)
C12838BB	ICP-INDEX CONTROL PANEL (ALTERNATE SYMBOLOGY)
C12842AB06	SPM-STALL PROTECTION MODULE
C12842AB07	SPM-STALL PROTECTION MODULE
C12844AB	INTEGRATED FLIGHT CABINET
C12848AA01	RMP-RADIO MANAGEMENT PANEL
C12848AB02	RMP-RADIO MANAGEMENT PANEL
C12848CA01	RMP-RADIO MANAGEMENT PANEL
C12848DA01	RMP-RADIO MANAGEMENT PANEL

C12851AA03	SPC-STALL PROTECTION COMPUTER
C12851BA01	SPC-STALL PROTECTION COMPUTER
C12851CA01	SPC-STALL PROTECTION COMPUTER
C12853AA	ACM-AIRCRAFT CONFIGURATION MODULE
C12858AA02	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
C12858AA02	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
C12858AA03	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
C12858AA03	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
C12858AA04	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
C12858AA04	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
C12858BA01	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
C12858BA01	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
C12858BA02	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
C12858BA02	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
C12858CA01	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
C12858CA01	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
C12858CA02	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
C12858CA02	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
C12858EA04	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
C12858EA04	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
C12858EA05	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
C12858EA05	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
C12858EA07	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
C12858EA07	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
C12860AA01	CENTRALIZED FAULT DISPLAY INT. UNIT
C12860AA02	CENTRALIZED FAULT DISPLAY INT. UNIT
C13039AA01	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
C13039BA01	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
C13039CA01	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
C13039EA01	FMGEC-FLIGHT MNGT & GUIDANCE ENV.COMPUTER
C13042AA01	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
C13042AA01	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
C13042AA02	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
C13042AA02	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
C13042AA03	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
C13042AA03	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
C13042AA04	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
C13042AA04	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
C13042BA01	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
C13042BA01	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
C13042BA02	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
C13042BA02	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
C13042BA03	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
C13042BA03	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
C13043AA01	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
C13043AA02	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
C13043AA03	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
C13043AA04	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
C13043BA01	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
C13043BA02	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
C13043BA03	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER
C13043BA04	FMGC - FLIGHT MANAGEMENT GUIDANCE COMPUTER

C13045BA03	SPOILER & STABILIZER CONTROL UNIT
C13045BA04	SPOILER & STABILIZER CONTROL UNIT
C13045BA05	SPOILER & STABILIZER CONTROL UNIT
C13093AA01	ENGINE INTERFACE UNIT
C13153AA01	HUDC - HEAD UP DISPLAY COMPUTER
C14000BC04	EIED-ENGINE INDIC. ELECTRONIC DISPLAY ( 2000A)
C14000CC05	EIED-ENGINE INDIC. ELECTRONIC DISPLAY ( 2000A)
C14000CC06	EIED-ENGINE INDIC. ELECTRONIC DISPLAY ( 2000A)
C14000CD06	EIED-ENGINE INDIC. ELECTRONIC DISPLAY ( 2000A)
C14000DA06	EIED-ENGINE INDIC. ELECTRONIC DISPLAY ( 2000A)
C14000DB06	EIED-ENGINE INDIC. ELECTRONIC DISPLAY ( 2000A)
C14000EA01	EIED-ENGINE INDIC. ELECTRONIC DISPLAY ( 2000B)
C14000EB01	EIED-ENGINE INDIC. ELECTRONIC DISPLAY ( 2000B)
C14000FA01	EIED-ENGINE INDIC. ELECTRONIC DISPLAY ( 2000B)
C14080AA	ANGLE OF ATTACK SENSOR
C14092AA01	PVI-PARAVISUAL INDICATOR
C14129BA	ALTIMETER (mb)
C14130AA	ALTIMETER (inch)
C14135AA	RIGHT PITOT STATIC PROBE
C14135AB	RIGHT PITOT STATIC PROBE
C14135BA	LEFT PITOT STATIC PROBE
C14135BB	LEFT PITOT STATIC PROBE
C14135CA	LEFT PITOT STATIC PROBE
C14135DA	LEFT PITOT STATIC PROBE
C14155AA03	MOTOR CONTROL EIED
C14155AA04	MOTOR CONTROL EIED
C14155AB04	MOTOR CONTROL EIED
C14155BB04	MOTOR CONTROL EIED
C14155CA01	MOTOR CONTROL EIED
C16177AC	ANGLE OF ATTACK SENSOR
C16193AB	STANDBY AIR DATA PROBE
C16193AC	STANDBY AIR DATA PROBE
C16195AA	PITOT PROBE
C16195BA	PITOT PROBE
C16197AA	STANDBY ALTIMETER
C16221AA02	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221AA02	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221AJA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221AJA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221CA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221CA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221DB04	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221DB04	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221FA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221FA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221GC03	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221GC03	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221GD04	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221GD04	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221JA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221JA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221KA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT

C16221KA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221KA02	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221KA02	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221LA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221LA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221LA02	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221LA02	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221LA03	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221LA03	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221MA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221MA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221QA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221QA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221RA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221RA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221SB03	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221SB03	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221TA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221TA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221UA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221UA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221VA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221VA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221WA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221WA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221WB01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221WB01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221ZA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16221ZA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16222AA01	TORQUE INDICATOR
C16235AA	BRAKE PRESSURE INDICATOR
C16235CA	BRAKE PRESSURE INDICATOR
C16254AA	PITOT PROBE
C16258AA	ANGLE OF ATTACK SENSOR
C16268AB	RUDDER TRIM POSITION INDICATOR
C16269AB	AILERON TRIM POSITION INDICATOR
C16291AA	ANGLE OF ATTACK SENSOR
C16291AB	ANGLE OF ATTACK SENSOR
C16363AA	ANGLE OF ATTACK SENSOR
C16393AA01	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16393AA02	INTEGRATED ELECTRONIC STANDBY INSTRUMENT
C16449AD	KCCU LEFT
C16449BD	KCCU RIGHT
C16455AB03	FCU - FLIGHT CONTROL UNIT
C17001AA01	ADM-AIR DATA MODULE
C17001AA01	ADM-AIR DATA MODULE
C17001BA01	ADM-AIR DATA MODULE
C17001BA01	ADM-AIR DATA MODULE
C17001CA01	ADM-AIR DATA MODULE
C17001CA01	ADM-AIR DATA MODULE
C17038AB02	GLOBAL NAVIGATION SATELITE SENSOR UNIT (GNSSU)
C17038AB03	GLOBAL NAVIGATION SATELITE SENSOR UNIT (GNSSU)

C17053AC03	ADU-AIR DATA UNIT
C17061AB	PPSM-PRIME POWER SUPPLY MODULE
C17065AA	GPS ANTENNA
C18009AA	VERIN LINEAIRE
C18009BA	VERIN LINEAIRE
C18111AA	PITCH-ROLL ACTUATOR CAPSTAN
C18112AA	YAW DAMPER ACTUATOR UNIT
C18117AA	PITCH-ROLL ACTUATOR
C18124AA	RGU-RATE GYRO UNIT
C18124AA	RGU-RATE GYRO UNIT
C18171BA	LATERAL ACCELEROMETER UNIT
C19004AA	HUD - Optical Projector Unit
C19004BA	HUD - Optical Projector Unit
C19004CA	EVS - OPU - OPTICAL PROJECTOR UNIT
C19006BA02	Heads-Up Flight Display Computer
C19006DA01	Heads-Up Flight Display Computer
C19006EA02	Heads-Up Flight Display Computer
C19006EA03	Heads-Up Flight Display Computer
C19140AA	OPTICAL HEAD UNIT
C19140BA	OPTICAL HEAD UNIT
C19152AA	UNIT,COMBINER
C19190AB03	SMD68,DISPLAY UNIT
C19190AB04	SMD68,DISPLAY UNIT
C19190AB07	SMD68,DISPLAY UNIT
C19232AA	HUD - Optical Display Unit Mounting Tray
C19234AB	HUD - Optical Combiner Unit
C19235AA	HUD- HFDC Equipped Mounting Tray
C19235BA	EVS - HFDC Mounting Tray
C19266AA01	MULTIPURPOSE CONTROL DISPLAY UNIT
C19266BA01	MULTIPURPOSE CONTROL DISPLAY UNIT
C19266DA01	MULTIPURPOSE CONTROL DISPLAY UNIT
C19298AF05	LCDU 725-LCD DISPLAY UNIT
C19298AF05	LCDU 725-LCD DISPLAY UNIT
C19366AF05	LCDU 725 VIDEO-LCD DISPLAY UNIT
C19366AF05	LCDU 725 VIDEO-LCD DISPLAY UNIT
C19596AC03	PDU - DISPLAY UNIT
C19596AC04	PDU - DISPLAY UNIT
C19625AA	HPU - HUD PROJECTOR UNIT
C19628AAL01	HCUL - HUD COMBINER UNIT LEFT SIDE
C19643AA	HCUR - HUD COMBINER UNIT RIGHT SIDE
C19668AA01	ON-BOARD NAVIGATION COMPUTER
C19668AA02	ON-BOARD NAVIGATION COMPUTER
C2219BM1	SPEED COMMAND BOARD
C2228BM	SPEED VOTER BOARD
C2228CM	SPEED VOTER BOARD
C2241BM	TOTAL SLOPE BOARD
C2242CM1	LOGIC 1 BOARD
C2249CM2	LOGIC 2 BOARD
C2358AJM	PC BOARD
C2492AM	PC BOARD
C2493AM	SRS POWER SUP MONITOR BOARD
C2613BM1	PC BOARD

C2732AM1	PROCESSOR BOARD
C28001AA	ADF COMBINED SENSE LOOP ANTENNA
C3691ABM	PC BOARD
C3693ABM	PC BOARD
C3693ABM1	PC BOARD
C3693ACM	PC BOARD
C3694ACM	PC BOARD
C3862AABM1	DISPLAY CONTROL BOARD
C3862AAM1	DISPLAY CONTROL BOARD
C3863AACM1	DISPLAY CONTROL BOARD
C3864AACM	POWER BOARD FAC
C3865AAM1	BOARD
C3894ABM1	PC BOARD
C3894ACM1	PC BOARD
C3894ADM3	PC BOARD
C3896ACM3	PC BOARD
C3897AAM	PC BOARD
C3898AWM2	PC BOARD
C3898AYM2	PC BOARD
C3899ABM1	PC BOARD
C3900AAM1	PC BOARD
C3901AAM	PC BOARD
C3902AAM4	PC BOARD
C3903AAM4	PC BOARD
C3904AAM3	PC BOARD
C3905AAM3	PC BOARD
C3906AAM2	PC BOARD
C3907AAM2	PC BOARD
C3913AAM3	PC BOARD
C3914AAM3	PC BOARD
C3915AAM3	PC BOARD
C3916AAM2	PC BOARD
C3943AAM1	PC BOARD
C3993ABBM4	YAW DAMPER COMMAND BOARD FAC
C3993ABBM5	YAW DAMPER COMMAND BOARD FAC
C3993ABCM5	YAW DAMPER COMMAND BOARD FAC
C3993ABM5	YAW DAMPER COMMAND BOARD FAC
C3994ABBM10	TRIM COMMAND BOARD FAC
C3994ABBM9	BOARD
C3994ABCM10	TRIM COMMAND BOARD FAC
C3994ABCM9	TRIM COMMAND BOARD FAC
C3994ABM10	TRIM COMMAND BOARD FAC
C3995ABBM5	YAW DAMPER MONITOR BOARD FAC
C3995ABBM6	YAW DAMPER MONITOR BOARD FAC
C3996ABBM8	TRIM COMMAND BOARD FAC
C3996ABM8	TRIM COMMAND BOARD FAC
C3997ABBM6	COMMAND ARINC EXPAND BOARD FAC
C3997ACAM	COMMAND ARINC EXPAND BOARD FAC
C3997ACBM	COMMAND ARINC EXPAND BOARD FAC
C3998ABBM5	EXT ARINC MONITOR BOARD FAC
C3999ABCM3	TRIM POWER BOARD FAC
C3999ACAM	TRIM POWER BOARD FAC

C3999ACAM2	TRIM POWER BOARD FAC
C3999ACBM2	TRIM POWER BOARD FAC
C4000AAM1	BOARD
C4000ABM14	BOARD
C4000ACM14	BOARD
C4000ADM14	BOARD
C4000AEM14	BOARD
C4000AFM13	BOARD
C4000AGM13	BOARD
C4000ALM9	BOARD
C4000AQM8	BOARD
C4000AQM9	BOARD
C4000BKM4	MEMORY BOARD
C4000BMM4	MEMORY BOARD
C4000BMM6	MEMORY BOARD
C4000BNM4	MEMORY BOARD
C4000BNM6	MEMORY BOARD
C4050AAM4	ATS POWER INTERFACE BOARD TCC
C4050AAM5	ATS POWER INTERFACE BOARD TCC
C4051AABM9	LOGIC BITE COMMAND BOARD TCC
C4052AABM7	LOGIC BITE MONITOR BOARD TCC
C4052AAM7	LOGIC BITE MONITOR BOARD TCC
C4053AAM3	ARINC INTERFACE BOARD TCC
C4055AAM2	ENGINE INTERFACE BOARD TCC
C4058ABM3	BOARD
C4058ACM	BOARD
C4059AABM	BOARD
C4059AAM	BOARD
C4059ACAM	BOARD
C4060AABM4	SERVO POWER BOARD FCC
C4061AABM5	SERVO IMAGE BOARD FCC
C4061ABBM5	SERVO IMAGE BOARD FCC
C4062AABM12	PCB
C4062AACM12	PCB
C4063AACM11	LOGIC SERVO IMAGE BOARD FCC
C4064AABM8	COMMAND TEST BOARD FCC
C4064AAM8	COMMAND TEST BOARD FCC
C4065AABM7	MONITOR TEST BOARD FCC
C4066AABM7	COMMAND ARINC EXPAND BOARD FCC
C4066ABBM	COMMAND ARINC EXPAND BOARD FCC
C4066ABCM	COMMAND ARINC EXPAND BOARD FCC
C4067AABM6	MONITOR ARINC EXPAND BOARD FCC
C4067ABBM	MONITOR ARINC EXPAND BOARD FCC
C4067ABCM	MONITOR ARINC EXPAND BOARD FCC
C4068ACM6	COPROCESSOR MONITOR BOARD
C4071ABM11	ARINC BOARD
C4071AEM5	ARINC BOARD
C4071ALAM	BOARD
C4072ABM12	ARINC BOARD
C4098ABBM5	PC BOARD
C4098AHBM2	BOARD
C4098AJM	BOARD

C4099AAM	CONVERTER BOARD
C4103AAM1	ARINC DISPLAY BOARD TRP
C4171AAM1	ARINC BOARD MTP
C4171ADM7	ARINC BOARD MTP
C4171AEM7	ARINC BOARD MTP
C4171AFM5	ARINC BOARD MTP
C4171AGM3	ARINC BOARD MTP
C4171AGM5	ARINC BOARD MTP
C4350ABAM	BATTERY BOARD MTP
C4352AAM	FRONT PANEL DISPLAY BOARD FCU
C4354AAAM	INTEGRAL LIGHTNING BOARD FCU
C4355AAM	ARINC BOARD FCU
C4366ABCM2	CPU BOARD MTP
C4366ABCM3	CPU BOARD MTP
C4366ABCM4	CPU BOARD MTP
C4443AAAM	PCB
C4460ABCM5	PCB
C4461ABCM	CPU BOARD TRP
C4468AAAM1	PCB
C4473AAAM1	FRONT PANEL DISPLAY TRP
C4864ABAM1	ARINC BOARD CGCC
C4940AAAM2	MONITOR ARINC EXPAND BOARD TCC
C5048ABBM2	ARINC BOARD
C5048ACBM	ARINC BOARD
C5048ACBM1	ARINC BOARD
C5048ADB M2	ARINC BOARD
C5048ADB M3	ARINC BOARD
C5048ADB M4	ARINC BOARD
C5048AEBM	ARINC BOARD
C5048AGBM	ARINC BOARD
C5048AGBM1	ARINC BOARD
C5048BBBM2	ARINC BOARD
C5048BCBM	ARINC BOARD
C5048BDBM1	ARINC BOARD
C5048BDBM4	ARINC BOARD
C5048BEBM	ARINC BOARD
C5048BGBM	ARINC BOARD
C5100AABM4	CPU 186
C5100AABM5	CPU 186
C5115AABM	PCB
C5115ACAM	PCB
C5222AAAM2	I/O MUX 1 CFDIU
C5223AAAM4	LOGIC BOARD CFDIU
C5223AAM04	LOGIC BOARD CFDIU
C5227AACM2	COMMON INTERFACE BOARD
C5269AEAM1	BOARD
C5269DCAM	CPU COMMAND BOARD CGCC
C5269DCAM1	CPU COMMAND BOARD CGCC
C5269DDAM2	CPU COMMAND BOARD CGCC
C5269DDAM3	CPU COMMAND BOARD CGCC
C5269ECAM	CPU COMMAND BOARD CGCC
C5269ECAM1	CPU COMMAND BOARD CGCC



C5269EDAM2	CPU COMMAND BOARD CGCC
C5269EDAM3	CPU COMMAND BOARD CGCC
C5276AAAM	I/O B/UP BOARD CFDIU
C5330AABM2	INNER LOOP BOARD
C5436AAAM	MEMORY BOARD
C5436AABM	MEMORY BOARD
C5436ABAM2	MEMORY BOARD
C5436ABBM3	MEMORY BOARD
C5436ACAM2	BOARD
C5436ACBM3	MEMORY BOARD
C5436ADAM	MEMORY BOARD
C5436ADB1	MEMORY BOARD
C5436ADB2	MEMORY BOARD
C5436AEAM	MEMORY BOARD
C5436AEBM2	MEMORY BOARD
C5436AFBM1	MEMORY BOARD
C5436AFBM8	PCB
C5436AGBM6	MEMORY BOARD
C5436AGBM7	PCB
C5436AHBM2	MEMORY BOARD
C5436AJBM1	MEMORY BOARD
C5436ALBM2	MEMORY BOARD
C5436AMBM1	MEMORY BOARD
C5436AMBM3	MEMORY BOARD
C5436ANBM1	MEMORY BOARD
C5436ANBM3	MEMORY BOARD
C5436ANBM4	MEMORY BOARD
C5441ABAM1	CPU BOARD
C5441ACAM1	CPU BOARD
C5441BBAM	CPU BOARD
C5441BCAM	CPU BOARD
C5441BEAM	CPU BOARD
C5485ABAM6	PCB, SDCU
C5485ABCM2	PCB, SDCU
C5485ABCM3	PCB, SDCU
C5485ABCM6	PCB, SDCU
C5485ABCM7	PCB, SDCU
C5486AAAM	CPU MP COM, MON SEC
C5486AABM3	CPU MP COM, MON SEC
C5486AADM3	CPU MP COM, MON SEC
C5486AADM4	CPU MP COM, MON SEC
C5487AAAM	CPU SP COM SEC
C5487AAAM	CPU SP COM SEC
C5487AAAM	CPU SP COM SEC
C5487ABBM4	CPU SP COM SEC
C5487ABBM4	CPU SP COM SEC
C5487ABBM4	CPU SP COM SEC
C5487ABBM5	CPU SP COM SEC
C5487ABBM5	CPU SP COM SEC
C5487ABBM5	CPU SP COM SEC
C5487ABBM6	CPU SP COM SEC
C5487ABBM6	CPU SP COM SEC

C5487ABBM6	CPU SP COM SEC
C5487ABDM4	CPU SP COM SEC
C5487ABDM4	CPU SP COM SEC
C5487ABDM4	CPU SP COM SEC
C5487ABDM5	CPU SP COM SEC
C5487ABDM5	CPU SP COM SEC
C5487ABDM5	CPU SP COM SEC
C5487ABDM6	CPU SP COM SEC
C5487ABDM6	CPU SP COM SEC
C5487ABDM6	CPU SP COM SEC
C5488AADM2	CPU SP MON SEC
C5488AADM2	CPU SP MON SEC
C5488AADM2	CPU SP MON SEC
C5488ABBM5	CPU SP MON SEC
C5488ABBM5	CPU SP MON SEC
C5488ABBM5	CPU SP MON SEC
C5488ABBM6	CPU SP MON SEC
C5488ABBM6	CPU SP MON SEC
C5488ABBM6	CPU SP MON SEC
C5488ABDM4	CPU SP MON SEC
C5488ABDM4	CPU SP MON SEC
C5488ABDM4	CPU SP MON SEC
C5488ABDM5	CPU SP MON SEC
C5488ABDM5	CPU SP MON SEC
C5488ABDM5	CPU SP MON SEC
C5488ABDM6	CPU SP MON SEC
C5488ABDM6	CPU SP MON SEC
C5488ABDM6	CPU SP MON SEC
C5489AABM	EXT SP COM SEC
C5489AABM	EXT SP COM SEC
C5489AABM	EXT SP COM SEC
C5569ACAM	PCB, CPU
C5569ACBM	PCB, CPU
C5569ACBM2	PCB, CPU
C5569ACDM	PCB, CPU
C5569ACDM2	PCB, CPU
C5571AAAM2	POWER COM FAC
C5571AABM2	POWER COM FAC
C5571AABM3	POWER COM FAC
C5572AABM2	POWER MON FAC
C5572AABM3	POWER MON FAC
C5575AABM	PCB, CPU
C5575AABM1	PCB, CPU
C5575AABM2	PCB, CPU
C5576AABM2	EXT MON FMGC
C5576ABBM2	EXT MON FMGC
C5577AABM3	PCB, EXTENSION MON
C5577ABBM2	PCB, EXTENSION MON
C5577ABBM3	PCB, EXTENSION MON
C5948AAM05	CPU MP FCSC
C5949AAM06	CPU SP FCSC
C5958AAM10	CPU FM FCMC

C5960AAM03	SC FCM FCMC
C5960AAM04	SC FCM FCMC
C5961ABM03	DLS FCM FCMC
C5963AAM03	DSI FCM FCMC
C5964AAM05	DSI-O FCM FCMC
C5967AAM04	CPU FG FMGEC
C5968AAM02	CPU FE FMGEC
C5969AAM02	CPU FIDS FMGEC
C5970AAM01	EXTENSION FE COM FMGEC
C5971AAM01	EXTENSION FE MON FMGEC
C6085ABM08	CPU BOARD SDCU
C6086AAM01	EXTENSION BOARD SDCU
C6153ABM07	CPU BOARD PRINTER
C6269AAM05	POWER SUPPLY BOARD PRINTER
C6269AAM06	POWER SUPPLY BOARD PRINTER
C6270ABM05	CONTROLLER BOARD PRINTER
C6270ABM08	CONTROLLER BOARD PRINTER
C6271AAM04	INPUT BOARD PRINTER
C6345AAM01	PCB,ARINC
C6351AAM04	EXTENSION FCS COM BOARD FCSC
C6352AAM04	EXTENSION FCS MOM BOARD FCSC
C6417AAM03	SC BOARD FQIC
C6423AAM04	CPU AFS
C6424AAM02	IL CPU FMGC
C6424AAM03	IL CPU FMGC
C-75802	STICK SHAKER
CACED1625	AUTO LOW SPEED AILER. DISCONNECTION BOX
CACED1625-07	AUTO LOW SPEED AILER. DISCONNECTION BOX
CACED1625-10	LOW SPEED AIL. DISCON. BOX
CAU3932AE04	RCAU-REMOTE CONTROL AUDIO UNIT
CDU3933AC04	ARCDU-AUDIO & RADIO CONTROL DISPLAY UNIT
CDU3933AC04	ARCDU-AUDIO & RADIO CONTROL DISPLAY UNIT
CDU3933AC04	ARCDU-AUDIO & RADIO CONTROL DISPLAY UNIT
CDU3933AC04	ARCDU-AUDIO & RADIO CONTROL DISPLAY UNIT
CDU3933AC04	ARCDU-AUDIO & RADIO CONTROL DISPLAY UNIT
CDU3933AC04	ARCDU-AUDIO & RADIO CONTROL DISPLAY UNIT
CDU3933AE04	ARCDU-AUDIO & RADIO CONTROL DISPLAY UNIT
CDU3933AE04	ARCDU-AUDIO & RADIO CONTROL DISPLAY UNIT
CDU3933AE04	ARCDU-AUDIO & RADIO CONTROL DISPLAY UNIT
CDU3933AE04	ARCDU-AUDIO & RADIO CONTROL DISPLAY UNIT
CDU3933AE04	ARCDU-AUDIO & RADIO CONTROL DISPLAY UNIT
CDU3933AE04	ARCDU-AUDIO & RADIO CONTROL DISPLAY UNIT
CDU3933AE04	ARCDU-AUDIO & RADIO CONTROL DISPLAY UNIT
CDU3933AE04	ARCDU-AUDIO & RADIO CONTROL DISPLAY UNIT
CDU3933AE05	ARCDU-AUDIO & RADIO CONTROL DISPLAY UNIT
CDU3933AE05	ARCDU-AUDIO & RADIO CONTROL DISPLAY UNIT
CDU3933AE05	ARCDU-AUDIO & RADIO CONTROL DISPLAY UNIT
CDU3933AE05	ARCDU-AUDIO & RADIO CONTROL DISPLAY UNIT
CDU3933AE05	ARCDU-AUDIO & RADIO CONTROL DISPLAY UNIT
CDU3933AE05	ARCDU-AUDIO & RADIO CONTROL DISPLAY UNIT
CDU3933AE05	ARCDU-AUDIO & RADIO CONTROL DISPLAY UNIT
CSBV1562	FLAPS & SLATS ASS. MONIT. ELECTRONIC BOX
CSBV1562-01	FLAPS & SLATS ASS. MONIT. ELECTRONIC BOX
CSBV1562-02	FLAPS & SLATS ASS. MONIT. ELECTRONIC BOX
CSBV1562-04	FLAP/SLAT ASSY MONIT BOX

D1898AAM06	INTERCONNECTION UNIT
D1899AAM03	MODULE INTERCONNEXION
D1900AAM02	BACK ASSEMBLY
D1901AAM06	BACK ASSEMBLY
DM-Q18-1-A	ELT ANTENNA
E12427AH	CONTROLLER BOARD (Printer)
E12427DA	CONTROLLER BOARD (Printer)
E12427EA	CONTROLLER BOARD (Printer)
E12428AD07	CPU BOARD PRINTER
E12428AD08	CPU BOARD PRINTER
E12428CB01	CPU BOARD PRINTER
E12428DA01	CPU BOARD PRINTER
E12428EA01	CPU BOARD PRINTER
E12428EB01	CPU BOARD PRINTER
E12432AG	MECHANICAL UNIT PRINTER
E12507AB	INTERCONNECTION UNIT
E12508AA	INTERCONNECTION UNIT
E12583KA01	BOARD
E12603AA01	CPU COMMAND BOARD CGCC
E12603AA03	CPU COMMAND BOARD CGCC
E12603BA01	CPU COMMAND BOARD CGCC
E12603BA03	CPU COMMAND BOARD CGCC
E12617AA04	CSP BOARD ELAC
E12617AA06	CSP BOARD ELAC
E12617AA07	CSP BOARD ELAC
E12617AA08	CSP BOARD ELAC
E12617AA10	CSP BOARD ELAC
E12618AA04	MSP BOARD ELAC
E12618AA07	MSP BOARD ELAC
E12618AA08	MSP BOARD ELAC
E12618AA10	MSP BOARD ELAC
E12703AA01	CPU MONITOR BOARD CGCC
E12703AA03	CPU MONITOR BOARD CGCC
E12703BA01	CPU MONITOR BOARD CGCC
E12703BA03	CPU MONITOR BOARD CGCC
E12711AG	MECHANICAL BLOCK
E12711BA	MECHANICAL BLOCK
E12711CA	MECHANICAL BLOCK
E12711DA	MECHANICAL BLOCK
E12816AA	ISOLATED BOARD
E12816AB	ISOLATED BOARD
E12822AF03	RMP CPU BOARD
E12833AA01	CPU BOARD FQIC
E12834AA01	EXTENSION BOARD FQIC
E12885AB01	CPU BOARD
E12886AB01	CPU BOARD EIU
E12887AA	DISCRETE BOARD EIU
E12889AA	BACK ASSY
E12908AB	INTERCO CPU BOARD
E12912CA02	BOARD
E12912FA01	BOARD
E12912GA01	BOARD

E12914AA	PWS CP BOARD
E12977AA01	EXT MON FMGC
E12978AA01	EXT MON FMGC
E12979AA01	CPU MP FCSC
E12989AA01	DLS FCM FCMC
E12992BA01	CPU BOARD
E12993BA01	CPU BOARD
E13004AA	EXTENSION BOARD SDCU
E13011AA	PCB
E13017AA01	CPU SP COM SEC
E13017AA01	CPU SP COM SEC
E13017AA01	CPU SP COM SEC
E13018AA01	CPU SP MON SEC
E13018AA01	CPU SP MON SEC
E13018AA01	CPU SP MON SEC
E13060AC	RMP ARINC BOARD ASSY
E13060AD	RMP ARINC BOARD ASSY
E13069AA01	CPU BOARD
E13086AA01	CPU MP BOARD
E13120AB01	CPU BOARD
E13140AA01	CPU BOARD
E13140BA01	CPU BOARD
E13142AA01	CPU BOARD
E13145AA	MODULE INTERCONNEXION
E13156AA	CPU FE BOARD
E13158AC02	CARTE MSP-DG
E13158AE06	CARTE MSP-DG
E13158AF08	CARTE MSP-DG
E13158BC02	CARTE MSP-DG
E13158BE06	CARTE MSP-DG
E13159AC02	CARTE MPU
E13159AE06	CARTE MPU
E13159BC02	CARTE MPU
E13159BE06	CARTE MPU
E13162AA	PCB,POWER MON
E13162AB	PCB,POWER MON
E13162AC	PCB,POWER MON
E13163AA	PCB,POWER COM
E13163AB	PCB,POWER MON
E13163AC	PCB,POWER MON
E13206BA	MODULE
E13700AA	DISPLAY
E13700BA	DISPLAY
E13700BB	DISPLAY
E16216AC	ENCODER
E16224AC	ENCODER
E16232AA	MODULE
E16771AA	MECHANICAL BLOCK
E17346AA	PSU BOARD (FCU)
E17346BA	PSU BOARD (FCU)
E17360AA	CPS BOARD ELAC
E17361AA	MPS BOARD ELAC

E17399AB	POWER SUPPLY BOARD
E17399AC	POWER SUPPLY BOARD
E17399BC	POWER SUPPLY BOARD
E19420AC	INTERCONNECTION BOARD
E19551AA	MODULE,LIGHTING LIM
E19613AA	SG BOARD
E19613BA	SG BOARD
E19730AB	CARTE NUM2
E1AM0	PITCH DYNAMOMETRIC ROD
E24231AA	BACKLIGHTING MODULE
E24232BB02	PCB,PPM
E2AM0	DYNAMOMETRIC ROD ENGINE 1
E30389AA	KEYBOARD
E3AM0	DYNAMOMETRIC ROD ENGINE 2
E4AM0	ROLL DYNAMOMETRIC ROD
E4BM0	ROLL DYNAMOMETRIC ROD
E59AAM2	ENCODER
E59AAM3	ENCODER
E59ABM3	ENCODER
E92AAM05	OPTICAL ENCODER DUAL FCU
E92BAM05	OPTICAL ENCODER DUAL FCU
E93AAM05	OPTICAL ENCODER SINGLE FCU
ERT560-01-0100A	DRA - DIGITAL RADIO ALTI
EVR716-01-0100A	EVR-ENHANCED VHF DATA RADIO
EVR716-01-0100A	EVR-ENHANCED VHF DATA RADIO
EVR716-01-0100A	EVR-ENHANCED VHF DATA RADIO
EVR716-01-0200A	EVR-ENHANCED VHF DATA RADIO
EVR716-01-0200A	EVR-ENHANCED VHF DATA RADIO
EVR716-01-0200A	EVR-ENHANCED VHF DATA RADIO
EVR716-01-0300A	EVR-ENHANCED VHF DATA RADIO
EVR716-01-0300A	EVR-ENHANCED VHF DATA RADIO
EVR716-01-0300A	EVR-ENHANCED VHF DATA RADIO
EVR716-11-0300A	EVR-TRANSCEIVER VHF 8.33 Khz
EVR716-11-0300A	EVR-TRANSCEIVER VHF 8.33 Khz
EVR716-11-0300A	EVR-TRANSCEIVER VHF 8.33 Khz
EVR716-11-0350A	EVR-TRANSCEIVER VHF 25 Khz
EVR716-11-0350A	EVR-TRANSCEIVER VHF 25 Khz
EVR716-11-0350A	EVR-TRANSCEIVER VHF 25 Khz
EVR750-03-0100A	ENHANCED VHF DATA RADIO Mode A
EVR750-03-0100A	ENHANCED VHF DATA RADIO Mode A
EVR750-03-0100A	ENHANCED VHF DATA RADIO Mode A
EVR750-04-0100A	ENHANCED VHF DATA RADIO VDL2
EVR750-04-0100A	ENHANCED VHF DATA RADIO VDL2
EVR750-04-0100A	ENHANCED VHF DATA RADIO VDL2
F1395993	LUXMETRE LS100
F1401316	ROTOR ASSY
F1401317	ROTOR ASSY
GMT4190-020	ELECTRONIC CLOCK
GMT4190-020	ELECTRONIC CLOCK
GT411-1700-7	AILERON POWER CONTROL UNIT
GT411-2800-5	RUDDER POWER CONTROL UNIT
GT411-3800-7	ELEVATOR POWER CONTROL UNIT

GT411-6001-9	MULTIFUNCTION SPOILER ACTUATOR
GT411-6002-3	GROUND SPOILER ACTUATOR
GT411-6003-3	GROUND SPOILER CONTROL MODULE
GT412-1500-3	AILERON TRIM ACTUATOR
GT412-2550-1	ELECTROMECHANICAL LINEAR ACTUATOR
GT412-4001-5	HORIZONTAL STAB. TRIM ACTUATOR
GT412-5002-1	FLAP 1 ACTUATOR
GT412-5004-1	FLAP 2 ACTUATOR RIGHT
GT412-5005-1	FLAP 2 ACTUATOR LEFT
GT412-5012-1	FLAP STANDARD 3R ASSEMBLY
GT412-5013-1	FLAP STANDARD 3L ASSEMBLY
GT412-5014-1	FLAP STANDARD 4R ASSEMBLY
GT412-5015-1	FLAP STANDARD 4L ASSEMBLY
GT412-5601-1	SLAT 1 ACTUATOR
GT412-5602-1	SLAT 2 ACTUATOR
GT412-5603-1	SLAT 3 ACTUATOR
GT412-5604-1	SLAT 4 ACTUATOR
GT412-5605-1	SLAT 5 ACTUATOR
GT412-5606-1	SLAT 6 ACTUATOR
GT412-5607-3	SLAT 7 ACTUATOR
GT412-5610-3	FLAP STANDARD 8L ASSEMBLY
GT412-5611-3	FLAP STANDARD 8R ASSEMBLY
GT415-0100-1	FCU-FLIGHT CONTROL UNIT
GT415-0100-3	FCU-FLIGHT CONTROL UNIT
GT415-0100-5	FCU-FLIGHT CONTROL UNIT
GT415-0200-5	SURFACE POSITION TRANSDUCER
GT415-2950-1	RUDDER-LIMITER POSITION TRANSDUCER
GT415-4002-9	MOTOR DRIVE UNIT
GT415-4003-5	MOTOR HSTA
GT415-5001-5	FLAP/SLAT POWER DRIVE UNIT
GT415-5090-5	Motor PDU
GT415-5100-1	BEARING SUPPORT ASSEMBLY PLAIN
GT415-5101-1	BEARING SUPPORT, CROSS DRILLED
GT415-5200-1	TORQUE TUBE TELESCOPING SLAT
GT415-5200-11	TORQUE TUBE TELESCOPING
GT415-5200-5	TORQUE TUBE TELESCOPING
GT415-5201-1	TORQUE TUBE F/M 1" SLAT/FLAP
GT415-5201-3	TORQUE TUBE F/M 1" SLAT/FLAP
GT415-5201-7	TORQUE TUBE F/M 1" SLAT/FLAP
GT415-5201-9	TORQUE TUBE F/M 1" SLAT/FLAP
GT415-5202-1	TORQUE TUBE F/M 1" SLAT/FLAP
GT415-5202-3	TORQUE TUBE F/M 1" SLAT/FLAP
GT415-5203-1	TORQUE TUBE F/M 7/8" SLAT
GT415-5203-3	TORQUE TUBE F/M 7/8" SLAT
GT415-5203-5	TORQUE TUBE F/M 7/8" SLAT
GT415-5203-7	TORQUE TUBE F/M 7/8" SLAT
GT415-5204-1	TORQUE TUBE M/M 7/8" SLAT
GT415-5204-3	TORQUE TUBE M/M 7/8" SLAT
GT415-5205-1	TORQUE TUBE F/M 7/8" SLAT
GT415-5205-3	TORQUE TUBE F/M 7/8" SLAT
GT415-5206-1	TORQUE TUBE F/F 7/8" SLAT/FLAP
GT415-5206-3	TORQUE TUBE F/F 7/8" SLAT/FLAP

GT415-5206-5	TORQUE TUBE F/F 7/8" SLAT/FLAP
GT415-5207-1	TORQUE TUBE TELESCOPING 1"
GT415-5300-3	RESOLVER
GT415-5400-1	SLAT ANGLE GEARBOX
GT415-5401-1	FLAP ANGLE GEARBOX
GT415-5500-1	ASYMMETRY BRAKE ASSEMBLY
GT415-5600-5	SLAT/FLAP LEVER
GT415-5701-3	SKEW SENSOR LVDP FLAP 1
GT415-5702-3	SKEW SENSOR LVDP FLAP 1-2-3
GT415-5900-11	SLAT/FLAP CONTROL UNIT
GT415-5900-13	CONTROL UNIT FLAP SLAT
GT415-5903-1	FAN ASSEMBLY SLAT/FLAP CONTROL UNIT
GT415-6004-9	FLIGHT SPOILER CONTROL LEVER
GT415-6005-1	PROXIMITY SWITCH, FCU
GT415-6006-5	SPOILER ROLL TRANSDUCER
GT417-0101-1	MOUNTING TRAY FCU
GT417-5902-3	TRAY, SLAT/FLAP CONTROL UNIT
GT546-0005-3	SUNVISOR
H138JFM	GYROSCOPIC HORIZON
H138JM1	GYROSCOPIC HORIZON
H138SM	GYROSCOPIC HORIZON
H140KQM	GYROSCOPIC HORIZON
H140KQM	GYROSCOPIC HORIZON
H140KYM	GYROSCOPIC HORIZON
H140KYM	GYROSCOPIC HORIZON
H150AF13	TOP OF GYRO
H150AKM1	GYROSCOPIC HORIZON
H150AKM1	GYROSCOPIC HORIZON
H200AKM	GYROSCOPIC HORIZON
H200AKM	GYROSCOPIC HORIZON
H201AJM	GYROSCOPIC HORIZON
H201AJM	GYROSCOPIC HORIZON
H221BLM	GYROSCOPIC HORIZON
H221BLM	GYROSCOPIC HORIZON
H221BPM	GYROSCOPIC HORIZON
H221BPM	GYROSCOPIC HORIZON
H301AKM	GYROSCOPIC HORIZON
H301AKM	GYROSCOPIC HORIZON
H301AKM1	GYROSCOPIC HORIZON
H301AKM1	GYROSCOPIC HORIZON
H301APM1	GYROSCOPIC HORIZON
H301APM1	GYROSCOPIC HORIZON
H301AZM1	GYROSCOPIC HORIZON
H301AZM1	GYROSCOPIC HORIZON
H301BAM	GYROSCOPIC HORIZON
H301BAM	GYROSCOPIC HORIZON
H301BCM1	GYROSCOPIC HORIZON
H301BCM1	GYROSCOPIC HORIZON
H301BDM1	GYROSCOPIC HORIZON
H301BDM1	GYROSCOPIC HORIZON
H301BGM	GYROSCOPIC HORIZON
H301BGM	GYROSCOPIC HORIZON



H321AAM1	GYROSCOPIC HORIZON
H321AAM1	GYROSCOPIC HORIZON
H321AKM1	GYROSCOPIC HORIZON
H321AKM1	GYROSCOPIC HORIZON
H321ALM1	GYROSCOPIC HORIZON
H321ALM1	GYROSCOPIC HORIZON
H321AQM1	GYROSCOPIC HORIZON
H321AQM1	GYROSCOPIC HORIZON
H321ASM1	GYROSCOPIC HORIZON
H321ASM1	GYROSCOPIC HORIZON
H321BDM1	GYROSCOPIC HORIZON
H321BDM1	GYROSCOPIC HORIZON
H321BHM1	GYROSCOPIC HORIZON
H321BHM1	GYROSCOPIC HORIZON
H321BTM	GYROSCOPIC HORIZON
H321BTM	GYROSCOPIC HORIZON
H321BVM1	GYROSCOPIC HORIZON
H321BVM1	GYROSCOPIC HORIZON
H321CCM	GYROSCOPIC HORIZON
H321CCM	GYROSCOPIC HORIZON
H321CMM	GYROSCOPIC HORIZON
H321CMM	GYROSCOPIC HORIZON
H321DQM	GYROSCOPIC HORIZON
H321DQM	GYROSCOPIC HORIZON
H321EAM	GYROSCOPIC HORIZON
H321EAM	GYROSCOPIC HORIZON
H341ABM	GYROSCOPIC HORIZON
H341ABM	GYROSCOPIC HORIZON
H341ADM2	GYROSCOPIC HORIZON
H341ADM2	GYROSCOPIC HORIZON
H341AGM1	GYROSCOPIC HORIZON
H341AGM1	GYROSCOPIC HORIZON
H341ALM	GYROSCOPIC HORIZON
H341ALM	GYROSCOPIC HORIZON
H341AMM1	GYROSCOPIC HORIZON
H341AMM1	GYROSCOPIC HORIZON
H341ANM	GYROSCOPIC HORIZON
H341ANM	GYROSCOPIC HORIZON
H341ANM1	GYROSCOPIC HORIZON
H341ANM1	GYROSCOPIC HORIZON
H341AUM	GYROSCOPIC HORIZON
H341AUM	GYROSCOPIC HORIZON
H341AZM	GYROSCOPIC HORIZON
H341AZM	GYROSCOPIC HORIZON
H341BCM	GYROSCOPIC HORIZON
H341BCM	GYROSCOPIC HORIZON
H341BRM1	GYROSCOPIC HORIZON
H341BRM1	GYROSCOPIC HORIZON
H341BVM	GYROSCOPIC HORIZON
H341BVM	GYROSCOPIC HORIZON
H341BWM	GYROSCOPIC HORIZON
H341BWM	GYROSCOPIC HORIZON

H341CBM	GYROSCOPIC HORIZON
H341CBM	GYROSCOPIC HORIZON
H342AA62	ROTOR ASSY
H342AAM	GYROSCOPIC HORIZON
H342AAM	GYROSCOPIC HORIZON
H911V4	STANDBY HORIZON
H911V4	STANDBY HORIZON
HA2542AR04	HANDSET FORWARD ATTENDANT
HA2542AR05	HANDSET FORWARD ATTENDANT
HP3520AC01	COCKPIT SPEAKER
J172ABM	VERTICAL ACCELEROMETER UNIT
J172ABM01	VERTICAL ACCELEROMETER UNIT
J172AFM02	LATERAL ACCELEROMETER UNIT
J172AFM03	LATERAL ACCELEROMETER UNIT
J196AAM01	RGU-RATE GYRO UNIT
J196AAM01	RGU-RATE GYRO UNIT
J196AAM01	RGU-RATE GYRO UNIT
J1AM1	LATERAL ACCELEROMETER
J226AAM01	GYROMETER
J4AM1	ACCELEROMETER
J5BM1	GYROMETER ASSY
J5BM2	RATE GYRO ASSY
JP3934AA02	JACK BOX 1,2
JP3935AA02	JACK BOX 3
K101ABM2	FLIGHT MODE ANNUNCIATOR
K10CM0	AFCS INDICATOR
K10DM0	AFCS INDICATOR
K10EM0	AFCS INDICATOR
K10FM0	AFCS INDICATOR
K10GM0	AFCS INDICATOR
K10KM0	AFCS INDICATOR
K11AM0	A/S ENGAGE UNIT
K129ABM4	FCU-FLIGHT CONTROL UNIT
K151ABM1	FAC ATS ENGAGE UNIT
K151ACM1	FAC ATS ENGAGE UNIT
K151ADM	FAC ATS ENGAGE UNIT
K151ADM0	FAC ATS ENGAGE UNIT
K151AEM	FAC ATS ENGAGE UNIT
K157ABM	FCU-FLIGHT CONTROL UNIT
K157ABM3	FCU-FLIGHT CONTROL UNIT
K157ABM5	FCU-FLIGHT CONTROL UNIT
K157ABM6	FCU-FLIGHT CONTROL UNIT
K157ACM3	FCU-FLIGHT CONTROL UNIT
K157ACM5	FCU-FLIGHT CONTROL UNIT
K157AEM	FCU-FLIGHT CONTROL UNIT
K158ABM1	THRUST RATING PANEL
K159ABM5	MTP-MAINTENANCE TEST PANEL
K159ACM5	MTP-MAINTENANCE TEST PANEL
K159ADM	MTP-MAINTENANCE TEST PANEL
K159ADM0	MTP-MAINTENANCE TEST PANEL
K159ADM1	MTP-MAINTENANCE TEST PANEL
K159AEM0	MTP-MAINTENANCE TEST PANEL

K159AEM1	MTP-MAINTENANCE TEST PANEL
K164AAM2	LCD DISPLAY
K165AAM1	LCD DISPLAY
K166AAM1	LCD DISPLAY
K168AAM1	DIPLAYS 5 DIGITS
K274AA40	VIZOR, FCU
K282AAM0202	PRINTER
K282AAM0304	PRINTER
K282AAM0305	PRINTER
K282AAM0306	PRINTER
K282AAM0406	PRINTER
K291AAM01	EIS INTEGR LIGHT PNL RIGHT FCU
K291AAM02	EIS INTEGR LIGHT PNL RIGHT FCU
K293AAM01	EIS INTEGR LIGHT PNL LEFT FCU
K293AAM02	EIS INTEGR LIGHT PNL LEFT FCU
K2AM0	COURSE MODULE
K2CM0	COURSE MODULE
K2DM0	COURSE MODULE
K3BM0	AUTOTHROTTLE MODULE
K3DM0	AUTOTHROTTLE MODULE
K3FM0	AUTOTHROTTLE MODULE
K4AM2	ENGAGE MODULE
K4CM0	ENGAGE MODULE
K4EM0	ENGAGE MODULE
K4GM0	ENGAGE MODULE
K5AM1	ROLL MODULE
K5BM1	ROLL MODULE
K5CM0	ROLL MODULE
K6AM1	ALTITUDE MODULE
K6CM0	ALTITUDE MODULE
K7DM0	TEST PANEL
K7FM0	TEST PANEL
K8AM2	TRIM ENGAGE UNIT
L402-006-49	COCKPIT ANNUNCIATOR SWITCH
L402-006-86	FLAPS OVERRIDE GPWS
L402-006-87	FLAPS OVERRIDE EGPWS
L402-007-45	TERRAIN INHIBIT SWITCH EGPWS
LA2G00200H3610G	CARD ARINC
LA2G00200HW020A	WIRING ASSY
LA2G00300H3610A	CARD ARINC 72
LA2G00301H3410B	CARD I/O
LA2G00400H3110B	CARD - CPU
LA2G00500H3410A	CARD E/S
LA2G00600080000	COMPUTER CENTRAL MAINTENANCE
LA2G00600080100	MODULE ON BOARD REPL
LA2G00700090000	COMPUTER CENTRAL MAINTENANCE
LA2G00700090100	MODULE ON BOARD REPL
LA2G007000A0000	COMPUTER CENTRAL MAINTENANCE
LA2G007000A0100	MODULE ON BOARD REPL
LA2G007000C0000	COMPUTER CENTRAL MAINTENANCE
LA2G007001A0000	COMPUTER CENTRAL MAINTENANCE
LA2G007001A0100	MODULE ON BOARD REPL

LA2G007001C0000	COMPUTER CENTRAL MAINTENANCE
LA2G007001C0100	MODULE ON BOARD REPL
LA2G01300H31100	CARD - CPU
LA2G01300H3110A	CARD - CPU
LA2G01400H34100	MODULE SUPPLY
LA2G01400H3610C	CARD ARINC
LA2H60200HM0100	BRAKE TEMPERATURE MONITORING UNIT
LA2H60300HM0100	BRAKE TEMPERATURE MONITORING UNIT
LA2H60300HM0100	BRAKE TEMPERATURE MONITORING UNIT
LA2L51415HM0100	BATTERY CHARGE LIMITER
LA2L51416HM0100	BATTERY CHARGE LIMITER
LA2L51417HM0100	BATTERY CHARGE LIMITER
LA5D10200HM0100	MODULE SUPPLY
LA5D10200HM010A	MODULE SUPPLY
LA5D10200HM010B	MODULE POWER SUPPLY 115V80W
LA5D10500HM0100	MODULE POWER SUPPLY 115V80W
LA5D1115V80W007	MODULE SUPPLY
LA5D1115V80W008	MODULE SUPPLY
LA5D1115V80W009	MODULE SUPPLY
LS-100	LUXMETRE REF.91722224
M046Z14-02	TRIM HORIZONTAL POSITION SENSOR
M109Z06-01	FLAP/SLAT ASSY P/OFF
M190AAM07	MECHANICAL BLOCK
PA4028AB01	PASSENGER ADDRESS AMPLIFIER
PAS3921AB02	PASSENGER ANNOUNCEMENT Sys.
PR505	PHOTOMETER
RAI2800M0706	SMOKE DETECTOR CONTROL UNIT
RAI2810M0303	SMOKE DETECTOR CONTROL UNIT
RAI2810M0404	SMOKE DETECTOR CONTROL UNIT
RAI2810M0505	SMOKE DETECTOR CONTROL UNIT
RAI2811M0103	SMOKE DETECTOR CONTROL UNIT
RAI2811M0104	SMOKE DETECTOR CONTROL UNIT
RAI2811M0106	SMOKE DETECTOR CONTROL UNIT
S1819502-02	KANNAD 406 ATP TRANSMITTER
S1819502-02	KANNAD 406 ATP TRANSMITTER
S1820513-02	ELT-REMOTE CONTROL PANEL
S1820514-01	ELT Programming Dongle
S1820514-04	ELT Programming Dongle
S1820514-05	ELT Programming Dongle
S1820515-06	ELT Buzzer Assembly
S1821502-01	KANNAD 406 AF TRANSMITTER
S1821502-01	KANNAD 406 AF TRANSMITTER
S1821502-01	KANNAD 406 AF TRANSMITTER
S1821502-02	KANNAD 406 AF TRANSMITTER
S1821502-02	KANNAD 406 AF TRANSMITTER
S1821502-02	KANNAD 406 AF TRANSMITTER
S1823502-02	KANNAD 406 AS TRANSMITTER
S1823502-02	KANNAD 406 AS TRANSMITTER
S1823502-02	KANNAD 406 AS TRANSMITTER
S1823502-03	KANNAD 406 AS TRANSMITTER
S1823502-03	KANNAD 406 AS TRANSMITTER
S1823502-03	KANNAD 406 AS TRANSMITTER

SL3924AA01	DECODER
TLS755-00-5100A	MULTI MODE RECEIVER
TLS755-00-5100A	MULTI MODE RECEIVER
TLS755-00-5100A	MULTI MODE RECEIVER
TLS755-01-0100A	MULTI MODE RECEIVER
TLS755-01-0100A	MULTI MODE RECEIVER
TLS755-01-0100A	MULTI MODE RECEIVER
TLS755-01-0101B	MULTI MODE RECEIVER
TLS755-01-0101B	MULTI MODE RECEIVER
TLS755-01-0101B	MULTI MODE RECEIVER
TLS755-01-0200A	MULTI MODE RECEIVER
TLS755-01-0200A	MULTI MODE RECEIVER
TLS755-01-0200A	MULTI MODE RECEIVER
TLS755-01-5100A	MULTI MODE RECEIVER
TLS755-01-5100A	MULTI MODE RECEIVER
TLS755-01-5100A	MULTI MODE RECEIVER
U303ADM	POWER SUPPLY BLOCK
U346ABM	POWER SUPPLY BLOCK
U346ADM	POWER SUPPLY BLOCK
U405AAM	POWER SUPPLY BOARD CGCC
U431ACM2	POWER SUPPLY
U431BAM	POWER SUPPLY
U431BAM00	POWER SUPPLY BOARD SEC, FAC, FMGC
U431BBM	POWER SUPPLY BOARD SEC, FAC, FMGC
U431CAM	POWER SUPPLY BOARD CFDIU
U431CAM00	POWER SUPPLY
U431DAM01	POWER SUPPLY
U432BAM3	POWER SUPPLY
U432DAM1	POWER SUPPLY
U432FAM	POWER SUPPLY
U432FAM00	POWER SUPPLY
U468ABM	POWER SUPPLY
U468ABM00	POWER SUPPLY
U468ACM02	POWER SUPPLY
U489AAM01	POWER SUPPLY BOARD FMGEC
U489ABM02	POWER SUPPLY
U519AAM	POWER SUPPLY
U522AAM02	POWER SUPPLY BOARD FCU
U522AAM03	POWER SUPPLY BOARD FCU
U523AAM04	POWER SUPPLY BOARD FCU
U543AAM03	POWER SUPPLY
V1AM0	PITCH TRIM ACTUATOR
V1AM0	PITCH TRIM ACTUATOR
V1AM1	PITCH TRIM ACTUATOR
V1AM1	PITCH TRIM ACTUATOR
107492	REGULATOR
126784	DRIVE UNIT
129552	THERMOSTAT
129666	SENSOR
373205	SWITCH-LOW OIL PRESSURE
396462	FLOW CONTROL VALVE
398750	VALVE

398786	TRIM AIR MODULATING
441761	FUEL CLUSTER ASSY
519858	APU STARTER
625946	CONTROLLER PACK
2022014	MOTOR
2022432	ACTUATOR
2022480	ACTUATOR
2117342	APU CONTROLLER
2117388	CABIN PRESSURE CONTROL
2704482	MOTOR, STARTER
3202442	VALVE
3202726	VALVE
3214306	VALVE - PRSOV
3214446	VALVE - HIGH STAGE
3214552	VALVE
3268792	PUMP ASSY
3269086	ACTUATOR-FEED
3275538	ACTUATOR
3283086	BRAKE LOCK
3289504	VALVE, AIR BREATHER
3290736	VALVE
3291186	VALVE
3291390	BLEED VALVE
3505436	STARTER
3505716	STARTER
3604524	COMBUSTOR CHAMBER
3612844	CLUTCH
3616959	FAN ASSY
3616960	FAN ASSY
3876287	DATA MEMORY MODULE
23E59-7	AIR VALVE IDG
1B190	CONVERTER
28B527	GENERATOR
3202166	VALVE ASSY-CHECK
979998	VALVE
126758	ACTUATOR
3876280	IGNITION UNIT
3215618	Valve, Pneumatic
3860864	Gear Assy Starter
18189-5	Converter
3505188-9	Air Turbine Starter
606832-18	Valve
48364	Starter Motor
48378	Starter Motor
69202	Fuel/Oil Heat Exchanger
102746	Valve outflow
103636	Safety Valve
103642	Pressure Relief Valve
103568	Valve
103770	Primary Valve
103772	Secondary Valve
105984	Valve, Shutoff, Anti-Ice

107460	High Stage Pilot Valve
107474	Pressure Regulator Valve
107484	Regulator, High Stage
107494	Reverse Flow Controller
108032	Pressure Regulator
109382	Valve, Load Control
109486	Shutoff Valve, APU
109804	Valve, Butterfly
121278	GEARBOX, BALLSCREW
121282	FLEX SHAFT
121664	Actuator, Ball Screw, Slave
121666	Ballscrew Actuator, Master
121667	ACTUATOR, MASTER
121754	FLEX SHAFT
122944	Valve, Shutoff, Anti-Ice
123266	Check Valve
123268	Check Valve
123558	APU Check Valve
123558	APU Check Valve
123562	VALVE, CHECK
123814	Check Valve
126704	ACTUATOR, PNEU DRIVE
126812	Escape Slide Actuator
126842	Actuator, Vane Diffuser
127508	POSITION INDICATOR
128646	Speed Switch
129110	Thermostat, Pneumatic
129112	ANTICIPATOR
129626	Temperature Sensor
129682	Overtemp Sensor
129694	Thermostat
129738	THERMOSTAT,PNEU, HIG
130158	Check Valve
130344	Selector
130476	Selector
130482	Selector
130502	Selector
130590	Selector
131162	Relay
131394	Controller
131402	Vacuum Regulator
131428	Jet Pump
152050	APU OIL COOLER
155665	Valve
158935	VALVE OIL TEMP
160126	APU OIL COOLER
160142	OIL COOLER
160148	VALVE OIL TEMP
160176	APU OIL COOLER
160366	APU OIL COOLER
160424	APU OIL COOLER
160466	Oil Cooler, 36-Series APU (Option)

160480	OIL COOLER
160482	FUEL/OIL HEATER
160494	Oil Cooler (131 APU)
160534	APU OIL COOLER
160550	APU Oil Temp Valve
160564	APU OIL COOLER
160610	APU OIL COOLER
182820	Primary Heat Exchanger
183010	Water Separator
184060	SEC HEAT EXCHANGER
194110	Primary Heat Exchanger
194270	HEAT EXCHANGER
194272	HEAT EXCHANGER
194274	Reheater
194276	Condenser
194278	Extractor
194768	Precooler
194792	Precooler
203925	Cooling Turbine
204050	Turbine Assy
204950	Cooling Turbine
207640	Cooling Fan
304313	ETC
304543	IGNITION UNIT
304643	DATA MEMORY MODULE
304685	CONTROLLER, APU
304817	ECB (36-300 APU option)
319886	Valve, Solenoid Shutoff
320154	Valve Solenoid
320362	Valve, Solenoid Shutoff
320490	VALVE,SOLENOID
320522	Valve, Directional Pilot
320548	Solenoid Valve
321760	Valve
321812	Valve, Shutoff
321858	Valve, Shutoff
321942	35 Degree Control Valve
369259	LEAD, IGN PLUG
373048	VALVE, PRESS RLF
379580	Oil Pump (85 Series)
383342	STARTER, ATS100-239
383702	STARTER
392444	Valve, Pressure Regulator
392454	REGULATOR, PILOT
392550	REGULATOR, THERMOSTAT
392678	Regulator Valve
392678	Regulator Valve
392710	Valve, Shutoff
392714	Valve, Pressure Regulating
392724	Valve
392796	STARTER VALVE
396076	Flow Control



396130	Valve, Flow Control
396430	Shutoff Valve
396436	Valve, Flow Control
396460	Flow contro
396442	Flow Control Valve
396480	Flow Control Valve (-200 only)
396496	Shutoff Control Valve (Freighter option)
396498	Flow Control Valve
396608	Flow Control & S/O Valve
396632	Valve, Flow Control (700C Model)
396648	Valve, Flow Control (Freighter conversion)
397150	S/O Valve
397364	Valve, Shutoff
397728	Valve, Shutoff
397868	Valve, Shutoff
398116	Cabin Temp Control Valve
398724	VALVE,RAM SHUTOFF,EM
398774	Shutoff Valve
398906	Shutoff Valve (Freighter only)
398908	Trim Air Mod Valve
398988	Crew Rest Shutoff Valve (Customer Option)
441789	Fuel Control
441790	Fuel Control
441921	Fuel Control (131 APU)
441921	Fuel Control (131 APU)
441995	Servo Valve, ELHYD
442032	Fuel Control
442120	Fuel Control
442124	Main Fuel Control
442206	Servo Valve, ELHYD
442207	Servo Valve, ELHYD
442208	Servo Valve, ELHYD
442209	Servo Valve, ELHYD
442238	Main Fuel Control
442317	Main Fuel Control
541674	Ram Air Actuator
548376	Cabin Temp Controller
548382	Selector, Temperature
548384	Anticipator Sensor
548388	High Limit Sensor
548392	Sensor
572756	Thermal Switch (C)
572757	Thermal Switch (T)
586110	Cooling Turbine
605290	FAN, GRND COOLING
605457	FAN, CENTRIFUGAL
606515	Check Valve
606622	Recirc Fan
606707	Cargo Fan
606772	Recirc Fan
606802	Vacuum Blower
607146	Controller, Cabin Temp

607300	Anticipator, Temperature
607400	Cabin Temp Selector
607510	35 Degree Controller
607518	Ram Air Controller
607690	Controller, Temperature
617166	Ram Air Sensor
617852	Selector, Temperature
622400	Flow Indicator
622664	Sensor, Airflow
622814	Pack/Zone Temp Control
622878	DUCT TEMP SENSOR
627482	Control/Sensor
624014	Sensor, Pack Temperature
624016	DUCT TEMP SENSOR
624018	CABIN TEMP SENSOR
624066	Window Heat Control Unit
624284	Pack Standby Control
624384	Sensor, Surface Temp
625868	Cabin Temp Selector
625878	Altitude Switch
625928	Sensor, Compressor Outlet
625992	Control, Temperature
627570	35 Degree Sensor
641109	Thermal Switch
641121	Zone Duct O/H Switch
641127	SWITCH,PACK DISCH O/H
641137	Switch, Thermal
641172	Pack Disch O/H Switch
642000	Pressure Switch
645055	EE Supply Fan
645172	Vacuum Blower
645405	Cabin Fan
645507	Fan, Recirculation
645670	Auxiliary EE Fan
645705	Recirc Fan
680640	AIR CYCLE MACHINE
683478	Thermal Switch
692525	SWITCH, OIL PRESS
692545	VALVE, SOLENOID
692546	VALVE, SOLENOID
692993	VALVE, SOLENOID
695227	COOLING FAN ASSY
698427	COOLING FAN ASSY
698430	SWITCH, OIL PRESS
801240	Turbo Fan
898930	STARTER VALVE
899320	OIL TANK ASSY
899766	VALVE, CHECK
927335	WATER EJECTOR
948894	SWITCH OVERTEMP
968214	VALVE, PRESS RLF
976036	OIL TANK ASSY

979088	Modulating Valve
979432	MOD S/O/V
979626	Valve, Shutoff
979680	Valve, Temp Control
979742	Valve, Shutoff
979786	Valve, Shutoff
979806	Valve, Surge Control
979826	STARTER VALVE
979858	STARTER VALVE
1150002	Ram Air Sensor
1150010	Cabin Temp Selector
1150250	Pack Temp Sensor
1150318	System Controller, ASCTU
1150320	Pressure Sensor
1150322	Manifold Temp Sensor
1150324	Precooler Inlet Sensor
1150364	Precooler Differential Pressure Sensor
1151324	Rescu 406 Beacon
1151336	Controller
1151864	Pack Controller
1151866	Zone Controller
1151868	Zone Controller
1151870	Controller, Temp, Auxiliary Zone
1151952	Standby Power Control Unit
1151968	CONTACTOR
1151970	CONTACTOR (P92 ONLY)
1151984	Start Power Unit
1152426	Start Converter Unit
1152464	SPU Controller
1152466	Start Converter Unit
1152466	Start Converter Unit
1153008	Remote Panel
1153154	Controller (NGS)
1153158	Altitude Sensor
1153174	Temperature Sensor
1153206	Bite Display Unit (NGS)
1153222	Pressure Sensor
2000866	Starter Motor (36 APU)
2021136	ACTUATOR
2021974	Outflow Valve Actuator
2100136	Transducer Press
2117180	Controller
2117844	ATMP Speed Control Unit
2118790	ECU, 36-Series APU (Option)
2118800	ECU
2118814	ECU, 36-Series APU (Option)
2118820	Remote BITE Display, (APU Option)
2118966	ECU
2119584	APU ECU
2119590	ECU
2119764	Selector
2119768	Controller

2202180	HEAT EXCH PK
2203085	Spray Nozzle
2205170	AIR CYCLE MACHINE
2206400	AIR CYCLE MACHINE
2214079	Water Extractor Duct
2214275	Water Nozzle
2215490	Right Secondary Pack Subassembly
2215510	Left Secondary Pack Subassembly
2340402	Reheater
2340404	Condenser
2340406	Water Extractor
2341344	BLEED AIR PRECOOLER
2341562	Ozone Converter
2341924	Heat Exchanger, NGS
2704376	Starter Motor (36 APU)
2704376	Starter Motor (36 APU)
2704480	PMA Rotor
2704506	Starter Motor
2704532	PMA Rotor
2704550	PMA Stator
2704554	Starter Motor
2710540	PMA Stator
3200674	Valve, Air/Oil HX
3202096	Check Valve, Recirculation
3202122	Check Valve
3202130	APU Check Valve
3202142	VALVE, CHECK
3202154	Intermediate Check Valve
3202222	Check Valve, Bleed Air
3202232	Check Valve
3202278	VALVE, CHECK
3202354	valve, check
3202444	Trim Air Check Valve
3202446	Trim Air Check Valve
3202544	Poppet Check Valve
3202598	VALVE, CHECK
3202832	VALVE, CHECK OUTLINE
3202896	VALVE, CHECK
3214176	REGULATOR,PNEU PILOT
3214230	Valve, Trim Regulator
3214304	High Stage Valve
3214330	Valve, Pressure Relief
3214334	Shutoff Valve
3214336	VALVE, MODULATING
3214442	Shutoff Valve
3214464	Relief Valve
3214488	Dual Purpose Valve
3214740	Press Reg S/O
3214862	Shutoff Valve
3214962	Valve, Pressure Regulator (Freighter only)
3214972	Valve, Trim Air Press. Regulator
3215064	Shutoff Valve

3215114	Relief Valve
3215580	Shutoff Valve
3215622	Valve
3224702	Muffler
3269264	CENTER DRIVE UNIT
3269422	Pneumatic Drive Unit
3272542	GEARBOX
3272544	GEARBOX
3272546	GEARBOX
3272570	BALLSCREW
3272626	GEARBOX
3282556	STOP MECHANISM, VBV
3282886	GEARBOX FEEDBACK
3282936	GEARBOX FEEDBACK
3282970	STOP MECHANISM,VBV
3282982	C-DUCT ACTUATOR
3282984	C-DUCT MANIFOLD
3289562	Control Valve, Precooler
3289590	Shutoff Valve
3289626	Precooler Valve
3289628	Precooler Valve
3289630	Starter Shutoff Valve
3289696	Valve, Low Limit Control
3289698	STARTER VALVE
3290050	Valve, Surge (36 APU)
3290052	Valve, Load (36 APU)
3290064	Start Air Valve
3290206	Temp Control Valve
3290304	Fire Wall Shutoff Valve
3290432	Valve, HP Shutoff
3290476	Valve, Surge Control
3290488	VALVE,ANTI-ICE,PACK
3290594	Chamber (36 APU)
3290628	AAV
3290630	Control Valve
3290662	Nose Cowl Anti-Ice Valve
3290694	STARTER VALVE
3290718	Valve, Pneumatic
3291024	Valve, Shutoff
3291172	STARTER VALVE
3291210	Valve, Load Control
3291214	VALVE, BLEED
3291338	Valve, Shutoff
3291339	Starter Control Valve
3291432	Valve, Load (131 APU)
3291466	Valve, Surge Control
3291522	Valve, Shutoff
3291556	STARTER VALVE
3291828	NGS Ram Air Valve
3311586	7 1/2 in Spherical Accumulator
3321500	FLT SPLR PCU
3399004	14th Stage Pilot Valve

3399052	Valve Controller
3399148	HP S/O Valve Controller
3505140	Starter (Option)
3505448	Starter
3505468	Air Turbine Starter
3505526	ENGINE STARTER
3505582	Starter
3505700	Starter, Air Turbine
3505788	Air Turbine Starter
3505945	Starter, Air Turbine
3505953	Air Turbine Starter
3601193	ATOMIZER ASSY
3603281	IGNITION UNIT
3605812	Starter Motor
3607680	Fuel Control (36 Option)
3608000	Fuel Control (85 Series) Obsolete
3609150	Fuel Control
3609480	SWITCH, CNTFGL
3610004	Fuel Nozzle
3614295	COOLING VALVE
3614400	TRANSDUCER ASSY
3614961	TRANSDUCER ASSY
3615133	FAN ASSY, OIL COOLER
3615700	SWITCH, CNTFGL
3615853	VALVE ASSY
3616140	FAN ASSY,OIL COOLING
3616848	VALVE, SWITCHING
3617750	Fuel Control
3800278	36-300[K] APU (Option)
3862775	FAN ASSY, OIL COOLER
3876046	VALVE, SOLENOID (331APU)
3876049	FUEL SOLENOID
3876129	IGNITION UNIT
3876132	IGNITOR LEAD
3876166	VALVE, SOLENOID
3876195	EXCITER, IGNITION
3876259	SWITCH, ELEC
3880130	Oil Pump (36 Option)
3880160	Scavenge Pump
3880190	Oil Pump, Lube (36 APU)
3880200	Pump, Gen Scavenge
3880210	Filter Assembly
3880410	VALVE ASSY
3880620	Valve, Regulating
3880650	PUMP ASSY
3880694	Oil Filter Assy (36 APU)
3880799	OIL COOLER
3881000	Oil Pump
3881120	Lube Pump
3881130	Lube Module
3882491	PRI NOZZLE/MNFLD
3882500	Fuel Control

3882550	Flow Divider Valve
3882639	VALVE, CHECK
3882730	Fuel Control
3882825	Fuel Control (36 APU)
3883220	IGV ACTUATOR
3883240	Fuel Control
3883297	Flow Divider Valve
3883985	FUEL CONTROL (331-400 APU)
3884629	COOLING FAN ASSY
3884647	SENSOR ASSY LOAD COMPRESSOR
3884833	TRANSDUCER ASSY
3886182	IGV ACTUATOR
3886188	ACTUATOR, IGV
3888000	IGNITION UNIT
3888058	EXCITER IGNITION
3888076	LEAD, IGN PLUG
3888134	VALVE, SOLENOID
3888217	Starter Motor
3888394	331-350 VECB (Diehl Avionic, Germany)
4089740	LCD/MCDU
4131020	Lube Module (Mfg. by Vian)
4131024	Lube Module
4141028	Valve, Deprime
5810110	Outflow Valve
7516193	Diplexer/Low Noise Amplifier
7516194	CMA-2200 Intermediate Gain
3.5E+39	COOLER ASSY, AIR/OIL
1.3E+42	Fan/Heat Exchanger Assembly
5.5E+62	Precooler
6.5E+64	Anti-Ice Valve
4.4E+65	Burner Staging Valve
6.2E+72	SHUTOFF VALVE (CCC)
6.3E+80	OIL COOLER
04P23	Bleed System Dual Solenoid Valve
1026V0800	Valve, Scavenge #4
1026V0900	Valve, Scavenge
1043V0300	Valve, Dual 3-Way
1058V0600	VALVE, START BLEED CONTROL
10P18	#3 Breather Valve
10P22	Valve, Shutoff
1108V0100	Dual 3-Way Pneu. Solenoid Valve
1109V0300	Dual 3-Way Pneu. Solenoid Valve
1110V0500	Valve, Turbine Blade Cooling
1115V0700	Valve, Bleed Air
11-811538	Precooler
11-841193	Fuel/Oil Heat Exchanger
11-851154	Precooler
11-851433	Precooler
1604A0000	Reheater/Condensor
16P29	Oil Fill Valve
20P78	Turbine Cooling Air Valve
2321H000	Hydraulic Valve

28B545	AC Generator (/Starter)
3214972	Valve, Trim Air Press. Regulator
3.5E+39	COOLER ASSY, AIR/OIL
3732A010000	Precooler
3.8E+94	Wing Anti-ice Valve
510-0031	AIR SHUTOFF VALVE
540-0565	Valve, Air Modulating, TCA
540-0712	Shutoff Valve
540-0717	IDG Valve
540-0774	Valve, Air Modulating, TCA
540-1148	VALVE,COWL ANTI-ICE S/OFF
565-0043	OIL COOLER
623V100	Bleed Valve
6.2E+72	SHUTOFF VALVE (CCC)
6.5E+64	Anti-Ice Valve
666V100	Valve, Check, 2 Way
67-2906	VALVE-AIR SHUTOFF
6.8E+55	Valve, Shutoff
755C0000	Secondary Heat Exchanger
7646B000	Wing Anti-ice Valve
815V700	Valve, 3-Way Pneumatic
8533C000	APU OIL COOLER
965A0000	AIR CYCLE MACHINE
966A0000	Primary Heat Exchanger
967A0000	Main Heat Exchanger
968A0000	Reheater
969A0000	Condensor
970A0000	Water Extractor
972A0000	Valve, Pack Anti-ice
983A0000	AIR CYCLE MACHINE
B18D18	Oil Cooler, IDG
PG1152BC02	Air Data Module (xref: 4068600-902)
WB3888446	IGNITOR PLUGS
WE3881781	OIL PUMP ASSY
WE3885046	Surge Valve
WE3888439	IGNITION EXCITER
14404	VACUUM SYSTEM CONTROL
17960	GNSXLS (BENDIX-KING)
2118860	DETECTOR
2591162	CONTROL PANEL
4001124	DIRECTIONAL ROTOR GYRO
4040800	AIR DATA COMPUTER
4052500	FMC UNIT
4052506	FLT MANAGEMENT CPU
4055500	MCDU
4055900	DSGC
4058650	DISPLAY UNIT
4059845	WINDSHEAR COMPUTER
4072500	DIGITAL AIR DATA
4073100	DIGITAL FLT GUIDE CPU
4073400	COMPUTER
4073610	AIMS DISPLAY UNIT



4074730	AIR DATA COMPUTER
4077880	MCDU
4081600	DISPLAY ELEC. UNIT
7519200	CMU
066-01127	ATC
066-50006	RECEIVER ILS RIA-35B
940-0300	TCAS PROCESSOR NG
964-0401	LOADER, AIR
965-0648	G PLUS COMPUTER
965-0976	EGPWS
967-0212	DFDAU
980-6020	RECORDER
980-6022	RECOR\
981-6301	DSDU
965-1076	EGPWS
81840	HT9100 Navigation Processing Unit
82165	Multi Function Control Display, HT9100 MCDU
2038827	Waveguide Switch
2041213	Mount, Single Radar R/T
2041214	Mount, Dual Radar R/T
2041220	Dual Radar Control Panel, Brown
2041223	Single Radar Control Panel, Blue
2041444	Antenna Drive
2041446	Antenna Array, 30 Inch
2587781	Autothrottle Servo
2587788	Servo Drive, Stall Avoidance
2589445	Yaw Damper
4034233	Position Sensor, Autopilot
4034234	Flight Mode Annunciator
4034235	Status Test Panel
4034236	Servo Drum and Housing Bracket
4034237	Dual Servo Dr. for Elev., Aileron, and Rudder
4034238	Dual Lateral Accelerometer
4034239	Dual Three-Axis Accelerometer
4034240	Nav Control Panel
4034241	Digital Flight Guidance Computer
4034242	Digital Flight Guidance Control Panel
4034559	Radio Dig Dist Indicator
4039891	MACH Airspeed Indicator
4039892	Barometric Altimeter
4039893	Vertical Speed Indicator
4051600	Flight Control Computer
4052504	Flight Management Computer
4056511	Dimming Panel
4056513	Remote Light Sensor
4061100	Digital Air Data Computer (xref: HG480E1)
4082260	Pushbutton Mode Control Panel
4082499	Flight Control Computer
4082730	EFIS Control Panel
4082740	Remote Light Sensor
4084076	Pegasus FM Card Set
7516100	Satellite Data Unit MCS 3000/6000

7516118	Satellite Data Unit MCS 4000
7516222	Radio Frequency Unit Interface Adapter
7516240	Radio Frequency Unit
7516250	High Power Amplifier
7516251	High Power Amplifier
7520000	High Power Amplifier
7520061	4-Channel High Speed Data Unit
8055515	Cockpit Printer
064-50000	VHF Data Radio (Mode 0), Quantum
064-50001	8.33 VHF Comm, ARINC 566
064-50002	8.33 VHF Comm, ARINC 716
066-50000	TCAS Processor, MOPS 7.0
066-50006	Receiver ILS RIA-35B
066-50007	Radio Altimeter (triplex A/P only), Quantum
066-50008	Receiver/Transmitter
066-50012	VOR/Marker Beacon Receiver, Quantum
066-50013	DME Interrogator, Quantum
066-50014	ADF Receiver, Quantum
066-50029	Multi-Mode Receiver w/ ILS and Enroute GPS
071-01503	TCAS Control Panel, Dual Mode S, Grey
071-01579	Dual Coupler Mount and
18-1738	Flap Position Transmitter
18-2141	Hydraulic Pressure Transmitter
18-3001	Triaxial Accelerometer
930-1000	Radar Processor
930-2000	Receiver / Transmitter Unit
964-0443	Multi-Input Interactive Display Unit
964-0452	HF Radio (Voice Only), Airbus
964-0453	HF Coupler, Airbus
964-0459	HF Coupler, B747 Classic & MD80/90
964-0465	Aircraft Personality Module, CMU
965-0758	Mk II Communication Management Unit
965-1676	MK-V EGPWS, Airbus
965-1690	Ground Prox. Warning system
967-0214	Flight Data Acquisition & Management Sys.
967-0512	ACMS Data Management Unit
967-0512	ACMS Data Management Unit
967-0512	ACMS Data Management Unit
967-0514	ACMS Data Management Unit
971-4193	Triaxial Accelerometer
980-6116	Control Panel w/Microphone, Grey
A5800B2	SWITCH GUARD
CG1093AD03	Inertial Reference Mode Panel
CG1135AC03	Inertial System Display Unit
CG1151AC03	Control Display Unit (Built by Sondertechnik)
CG2000AC01	Control Display Unit
DG1035AB03	Digital/Analog Adapter
4056510	DISPLAY UNIT
4058000	Multifunction Control Display Unit
4086850	DISPLAY UNIT
066-01171	TA/VSI Display, Grey
HG1050AE	Inertial Reference Unit (10 MCU)

HG1103BA	Inertial Reference Unit
HG2030BE	Air Data Inertial Reference Unit (4MCU)
HG2050	Air Data Inertial Reference Unit